

pure<sup>11</sup>-Nr.: 1105010, Marke:

## Eigenschaften



## Empfohlene Reinraumklassen

ISO

GMP

## Material

- 

## Verpackung

- Box

## Produktvarianten

---

**pure<sup>11</sup>-Nr.: 1105010,**

---

**pure<sup>11</sup>-Nr.: 1105010BLL, Halyard Nitril-Handschuhe PUREZERO HG3 blau #CLN9031LG**

Farbe: Blau; Größe: L / VE: 1500STK

---

**pure<sup>11</sup>-Nr.: 1105010BLM, Halyard Nitril-Handschuhe PUREZERO HG3 blau #CLN9031MD**

Farbe: Blau; Größe: M / VE: 1500STK

---

**pure<sup>11</sup>-Nr.: 1105010BLS, Halyard Nitril-Handschuhe PUREZERO HG3 blau #CLN9031SM**

Farbe: Blau; Größe: S / VE: 1500STK

---

**pure<sup>11</sup>-Nr.: 1105010BLXL, Halyard Nitril-Handschuhe PUREZERO HG3 blau #CLN9031XL**

Farbe: Blau; Größe: XL / VE: 1500STK

---


**pure<sup>11</sup>-Nr.: 1105010BLXS, Halyard Nitril-Handschuhe PUREZERO HG3 blau #CLN9031XS**

Farbe: Blau; Größe: XS / VE: 1500STK

---

# GUIDE TO DONNING AND DOFFING OF NON-STERILE CLEANROOM GLOVES

## DONNING GLOVES

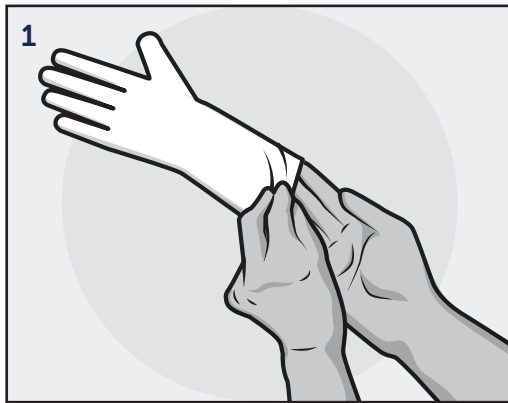

1 Grasp the beaded cuff of one glove and carefully pull over the opposite hand.



2 Gently ease the glove up over the hand and wrist.



3 Grasp the second glove at the edge of the beaded cuff.




4 Gently ease the glove up over the hand and wrist.




5 You are now ready to perform your task.


## DOFFING GLOVES

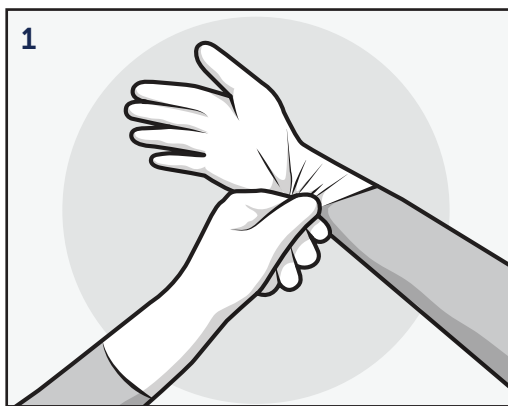

1 Grasp the exterior of one glove with your other gloved hand.

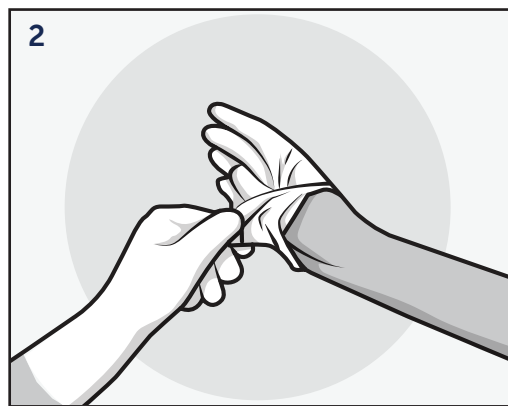


2 Carefully pull the glove off your hand, turning it inside-out.

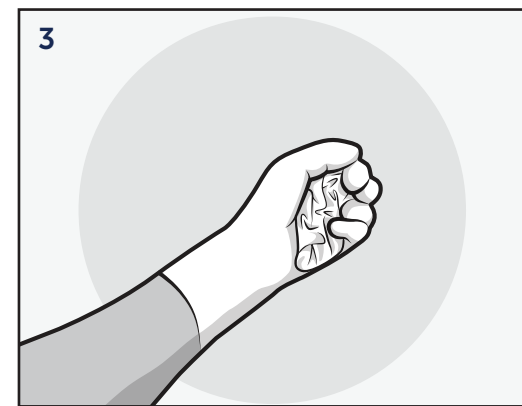


3 Ball the glove up and hold in your other gloved hand.



4 Slide your ungloved fingers into the opening of the other glove.

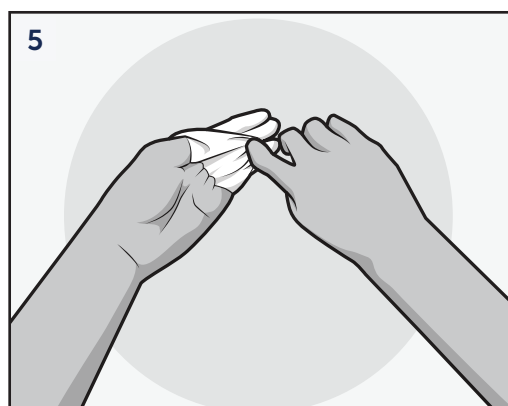

5 Carefully pull the glove off your hand, turning it inside-out and wrapping it around the doffed glove in your palm.

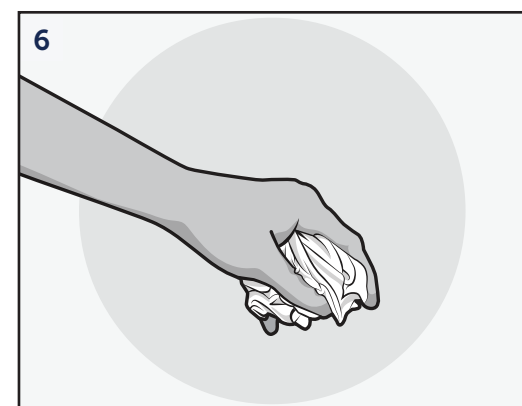

6 Discard appropriately.

For more information, contact your HALYARD\* representative or distributor, or visit [www.purezerogloves.com](http://www.purezerogloves.com)