

pure¹¹-Nr.: 1105011, Marke:

Eigenschaften



Empfohlene Reinraumklassen

ISO

GMP

Material

-

Verpackung

- Box

Produktvarianten

pure¹¹-Nr.: 1105011,

pure¹¹-Nr.: 1105011WHL, Halyard Nitril-Handschuhe PUREZERO HG3 weiß #CLN3031LG

Farbe: Weiß; Größe: L / VE: 1000STK

pure¹¹-Nr.: 1105011WHM, Halyard Nitril-Handschuhe PUREZERO HG3 weiß #CLN3031MD

Farbe: Weiß; Größe: M / VE: 1000STK

pure¹¹-Nr.: 1105011WHS, Halyard Nitril-Handschuhe PUREZERO HG3 weiß #CLN3031SM

Farbe: Weiß; Größe: S / VE: 1000STK

pure¹¹-Nr.: 1105011WHXL, Halyard Nitril-Handschuhe PUREZERO HG3 weiß #CLN3031XL

Farbe: Weiß; Größe: XL / VE: 1000STK

pure¹¹-Nr.: 1105011WHXS, Halyard Nitril-Handschuhe PUREZERO HG3 weiß #CLN3031XS

Farbe: Weiß; Größe: XS / VE: 1000STK

GUIDE TO DONNING AND DOFFING OF NON-STERILE CLEANROOM GLOVES


DONNING GLOVES




1 Grasp the beaded cuff of one glove and carefully pull over the opposite hand.




2 Gently ease the glove up over the hand and wrist.

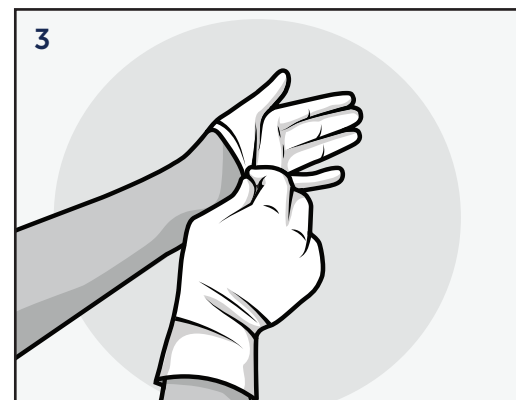

3 Grasp the second glove at the edge of the beaded cuff.

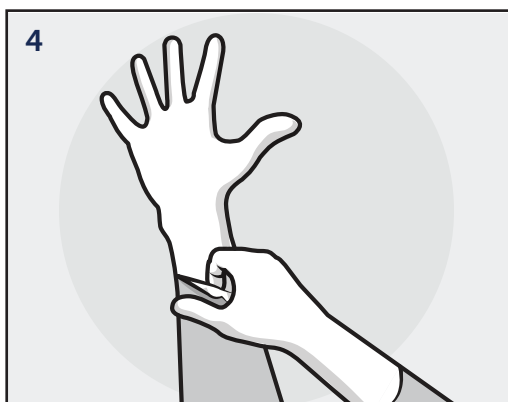


4 Gently ease the glove up over the hand and wrist.

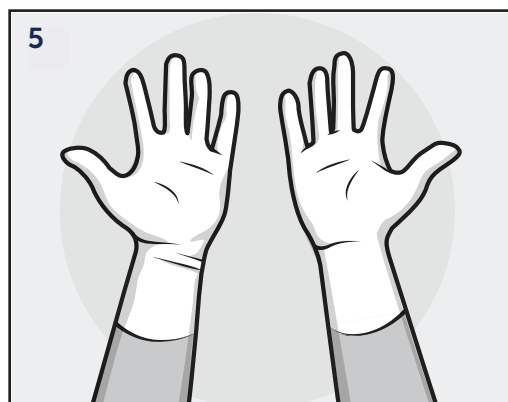


5 You are now ready to perform your task.


DOFFING GLOVES

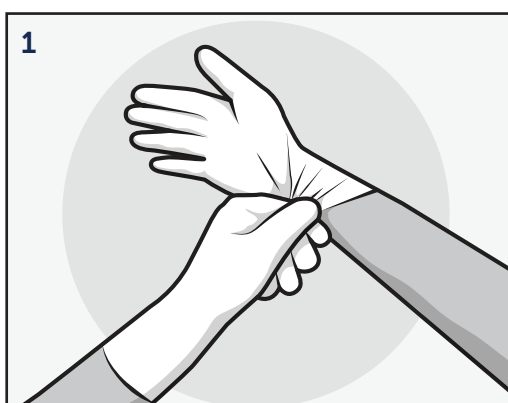

1 Grasp the exterior of one glove with your other gloved hand.

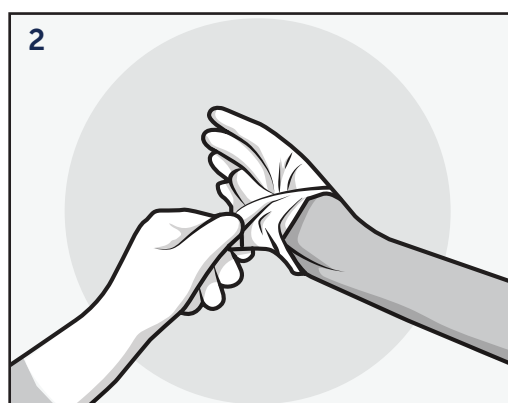


2 Carefully pull the glove off your hand, turning it inside-out.

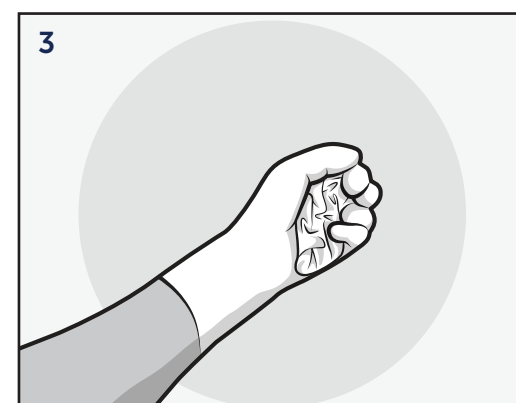


3 Ball the glove up and hold in your other gloved hand.



4 Slide your ungloved fingers into the opening of the other glove.

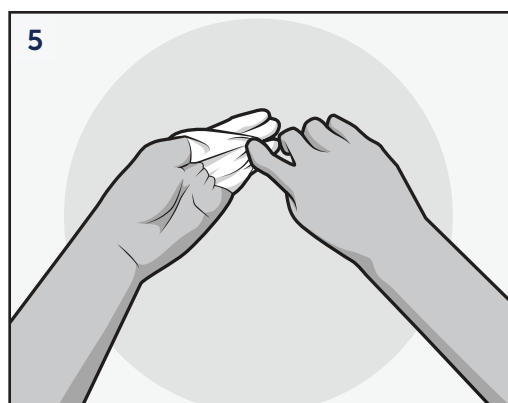

5 Carefully pull the glove off your hand, turning it inside-out and wrapping it around the doffed glove in your palm.

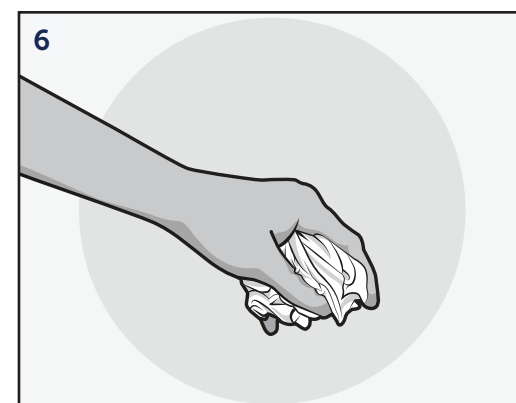

6 Discard appropriately.

For more information, contact your HALYARD* representative or distributor, or visit www.purezerogloves.com