



Empfohlene Reinraumklassen

ISO 5|6|7|8|9

GMP C|D



Halyard Nitril-Handschuhe PUREZERO HG5 blau #CLN92512LG

pure¹¹-Nr.: 1130173, Marke: Halyard

Eigenschaften

- Marke: Halyard
- Handschuhtyp: Dünnfilm
- Länge in cm: 30,5 cm
- Chemikalienbeständigkeit - Typ: Typ B
- Puderfrei
- Material: Nitril
- Texturierte Fingerspitzen
- Zytostatikageeignet
- Lebensmittelkonformität
- Silikonfrei
- Vulkanisationsbeschleunigerfrei
- Verpackungsform: Beutel
- Antistatisch
- AQL (Acceptable Quality Level)-Wert: 1
- Chemikalienbeständig gegen Isopropanol (100%): Level 6 (>480min)
- Chemikalienbeständig gegen Isopropanol (70%): Level 6 (>480min)
- Länge in Inches: 12 In
- Latexfrei
- Materialzusammensetzung: Reinmaterial

- Oberflächenbeschaffenheit: glatt
- Passform Hand: beidhändig
- Viren-/Mikroorganismenschutz EN ISO 374-5:2016
- Wandstärke Mittelfinger in mm: 0,1 mm

Material

- Nitril

Verpackung

- 1500STK

Produktvarianten

pure¹¹-Nr.: 1130173BLL, Halyard Nitril-Handschuhe PUREZERO HG5 blau #CLN92512LG

Farbe: Blau; Größe: L / VE: 1500STK

pure¹¹-Nr.: 1130173BLM, Halyard Nitril-Handschuhe PUREZERO HG5 blau #CLN92512MD

Farbe: Blau; Größe: M / VE: 1500STK

pure¹¹-Nr.: 1130173BLS, Halyard Nitril-Handschuhe PUREZERO HG5 blau #CLN92512SM

Farbe: Blau; Größe: S / VE: 1500STK

pure¹¹-Nr.: 1130173BLXL, Halyard Nitril-Handschuhe PUREZERO HG5 blau #CLN92512XL

Farbe: Blau; Größe: XL / VE: 1500STK

pure¹¹-Nr.: 1130173BLXS, Halyard Nitril-Handschuhe PUREZERO HG5 blau #CLN92512XS

Farbe: Blau; Größe: XS / VE: 1500STK



HALYARD* **PUREZERO*** HG5 BLUE SGX* NITRILE CLEANROOM GLOVES

DATA PACK

For the Cleanroom Environment
For Industrial Use Only

HALYARD* **PUREZERO*** HG5 BLUE SGX* NITRILE CLEANROOM GLOVES

All documents depicted here are FOR EXAMPLE ONLY. For specific documents related to lot numbers, please visit www.halyardhealth.com/information, or ask your Distributor or HALYARD* Representative.

TABLE OF CONTENTS

Technical Data Sheet	4
COA – Certificate of Analysis	7
Package Labels	
Case Label.....	9
Bag Label.....	10
Packaging Certificates	
Bag–Certificate of Conformance (COC)	12
Bag 2–Certificate of Conformance (COC)	14
Case Liner–Certificate of Conformance (COC).....	17
Safety Data Sheet	21
REACH Regulation Letter	26
Certificate of Registration 9001:2015	28
Certificate of Registration ISO 13485:2016	30
Certificate of Registration ISO 14001:2015	32
Accelerator-Free Letter	33
Food Handling Letter	34
Chemotherapy Drug Resistance Guide	36
Chemical Resistance Guide	37
ESD Testing Letter	38
BSE/TSE Letter	42
Storage Conditions Letter	43
Silicone-Free Letter	44
Packaging Supplier Notification Letter	46


TECHNICAL DATA SHEET



TECHNICAL DATA SHEET

Description

HALYARD* **PUREZERO*** HG5 Blue SGX* Nitrile Cleanroom Gloves with SMOOTH GRIP TECHNOLOGY* (SGX*) are 12" long and designed for semiconductor, pharmaceutical and medical device manufacturing applications. These gloves are clean processed (washed repeatedly in deionized water) to ensure consistent control of low particles and extractables and can be double donned. They are recommended for use in ISO Class 5 or higher and Grade B/C/D cleanrooms. Because HALYARD* **PUREZERO*** HG5 Blue SGX* Cleanroom Gloves have an **accelerator-free**¹ formulation, there is a reduced risk of allergies and skin irritation associated with accelerator chemicals in other nitrile gloves.

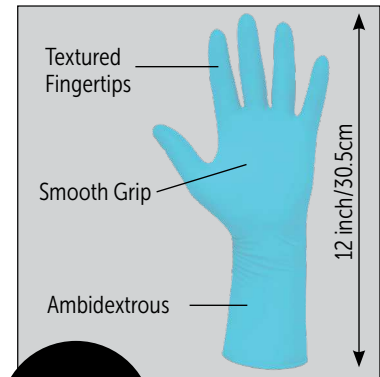

**Meets
USP <800>
Guidelines.**

Cleanliness Properties

Max Particle Count (>0.5 µm)	<2000 Particles/cm ²	IEST RP-CC005
------------------------------	---------------------------------	---------------



Manufactured at OUR OWN
Safeskin Facility in Thailand.

Physical Properties

AQL	1.0
Non-Sterile	✓
Ambidextrous	✓
Smooth Grip	✓
Textured Fingertips	✓
Accelerator-Free ¹	✓
Latex-Free	✓
Powder-Free	✓
Silicone-Free	✓
Static Dissipative in Use ²	✓
Tensile Strength	24 MPa (Target)
Ultimate Elongation	600%
Shelf Life	3 Years

Glove Dimensions

	X-SMALL	SMALL	MEDIUM	LARGE	X-LARGE
Glove Length (inch/cm)	12"/30.5	12"/30.5	12"/30.5	12"/30.5	12"/30.5
Middle Finger Length (mm)	71	78.5	80.5	88.1	91.6
Width of Palm (mm)	70	80	95	110	120
Finger Tip Thickness	0.10mm (3.9mil)	0.10mm (3.9mil)	0.10mm (3.9mil)	0.10mm (3.9mil)	0.10mm (3.9mil)
Palm Thickness	0.08mm (3.2mil)	0.08mm (3.2mil)	0.08mm (3.2mil)	0.08mm (3.2mil)	0.08mm (3.2mil)
Cuff Thickness	0.07mm (2.8mil)	0.07mm (2.8mil)	0.07mm (2.8mil)	0.07mm (2.8mil)	0.07mm (2.8mil)



HALYARD* PUREZERO* HG5 BLUE SGX* NITRILE GLOVES (12")

For the Cleanroom Environment
For Industrial Use Only

TECHNICAL DATA SHEET

Packaging Data

Double bag, plus case liner
1500 gloves per case: 250 gloves per PE bag X 6 PE bags per lined carton
Packaged in ISO Class 5 Cleanroom

Quality & Regulatory Standards

Compliant to these regulatory standards:

ISO 9001
ISO 13485

Compliant to these food handling regulatory standards:

FDA 21 CFR 177-2600
Commission Regulation (EU) No 10/2011

PPE Category III according to Regulation (EU) 2016/425 EEC

EN 16523-1:2015+A1:2018

EN ISO 374-2:2019

EN ISO 374-4:2019

EN ISO 374-5:2016 Virus Protection

EN ISO 374-1:2016+A1:2018/ Type B

EN ISO 21420:2020 Dexterity Classification: Level 5

Compliant with the REACH regulation

Static Dissipative in Use

Tested per ANSI/ESD STM 15.1-2019

Meets USP <800> Guidelines

Additional Glove Information

Recommended for use in ISO Class 5 or higher and Grade B/C/D cleanrooms.

Declaration of Conformity (DoC) and Certificates of Analysis (COA) for every production lot available on-line at halyardhealth.com/information


Ordering Information

**HALYARD* PUREZERO* HG5 BLUE SGX* NITRILE GLOVES,
NON-STERILE, AMBIDEXTROUS, SMOOTH, 1500/CASE**

Size	Code
XS	CLN92512XS
SM	CLN92512SM
MD	CLN92512MD
LG	CLN92512LG
XL	CLN92512XL

For additional information
or samples, contact your
local distributor.

CE 2797
(PPE Cat. III)




1 Not formulated with these commonly used vulcanizing chemicals: Sulfur, Thiurams, Thioxoles, Guanidines and Carbamates.

2 Tested against ANSI/ESD STM 15.1-2019

This fact sheet has been created using the most recent information. In the interest of continuous improvement, the characteristics of the products may change without prior notice.

CERTIFICATE OF ANALYSIS





Safeskin Medical & Scientific (Thailand) Ltd. 200 Moo 8 Kanchanavanich Road Tambol Prik, Amphur Sadao Songkhla 90120 Thailand

CERTIFICATE OF ANALYSIS

Product Description : HALYARD* PUREZERO* HG5 Blue SGX* Nitrile Gloves

Catalog Numbers : CLN92512XS, CLN92512SM, CLN92512MD, CLN92512LG, CLN92512XL

OMH Code : 51750-80, 51751-80, 51752-80, 51753-80, 51754-80

Batches : SM22742BX to SM23042BX

SM22742BV to SM23042BV

Total Cases per Lot : 254

Date of Manufacture : Oct-22

Expiration Date : 2025-09-30

Physical Test Data

	Watertight	Visual Defects		Dimensions	Tensile (MPa)	Elongation (%)	Median Force at Break (N)
		Minor	Negligible		Pre Aging	Pre Aging	Pre Aging
Sample Size :	600	600	600	130	78	78	78
AQL Level :	1.0	2.5	4.0	4.0	4.0	4.0	4.0
Failures Allowed per AQL :	8	22	36	10	6	6	6
Failures :	0	0	0	0	0	0	0
Inspection Results :	Accept	Accept	Accept	Accept	Accept	Accept	Accept
Averages:					33.29	573	8.53

Test Methods : Water tight test ASTM D 5151, EN 455-1, Elongation and Tensile ASTM D 412, ASTM D 6319, Median Force at Break EN 455-2, Dimension ASTM D 6319, EN 455-2

Particle Test Data

Particle	Total	Inspection
Particle	Particles/cm ²	Result
#/cm ² :	618	Accept

Particulate Level (≥0.5 microns) #/cm²

Test Method : IEST-RP-CC005.4

Review By :

 15 NOV 2022
(QA Sr. Manager)

FORM-28622/0

PACKAGE LABELS



PUREZERO* HG5

BLUE SGX* NITRILE GLOVES



- (FR) HG5 SGX* Gants en nitrile bleu
- (DE) HG5 SGX* Nitrilhandschuhe, blau
- (BG) HG5 сини нитрилни ръкавици SGX*
- (ES) Guantes de nitrilo azul HG5 SGX*
- (CS) Modré SGX* nitrilové rukavice HG5
- (DA) HG5 blå SGX* nitrilhandsker
- (ET) HG5 sinised SGX* nitrilkindad
- (EL) HG5 Μπλε SGX* γάντια νιτριλίου
- (IT) Guanti in nitrile blu HG5 SGX*
- (LV) HG5 zilie SGX* nitrila cimdi
- (LT) HG5 Blue SGX* nitrilo pirštinės
- (HR) HG5 plave SGX* nitrilne rukavice
- (HU) HG5 Blue SGX* nitril kesztyű
- (MT) HG5 Ingwanti tan-Nitril SGX* Blu



AQL 1.0 Level 2 GI



EN ISO 374-1:2016+A1:2018

105175281
(REF)
CLN92512MD


306 80651 51752 5

PUREZERO* HG5


BLUE SGX* NITRILE GLOVES



- (NL) HG5 blå SGX* nitrilhandsker
- (NO) HG5 sinised SGX* nitrilkindad
- (PL) Niebieskie rękawice nitrylowe HG5 SGX*
- (PT) Luvas de nitrilo SGX* azul HG5
- (RO) HG5 SGX* – mănuși din nitril albastre
- (RU) Нитриловые перчатки HG5 Синий SGX*
- (SK) Modré SGX* nitrilové rukavice HG5
- (SL) Modre rokavice SGX* iz nitrila HG5
- (SR) HG5 plave SGX* nitrilne rukavice
- (FI) HG5 Siniset SGX*-nitrilikäsineet
- (SV) HG5 Blå SGX*-nitrilhandskar
- (JA) ピュアゼロ HG5 ブルーSGX*ニトリルグローブ
- (KO) HG5 파란색 SGX* 니트릴 글러브
- (ZH) HG5 蓝色 SGX* 丁腈手套



AQL 1.0 Level 2 GI



EN ISO 374-1:2016+A1:2018

105175281
(REF)
CLN92512MD


306 80651 51752 5

BAG LABEL



PUREZERO* HG5

BLUE SGX* NITRILE GLOVES

For the Cleanroom Environment

For Industrial Use Only

12 in. / 30.5 cm

(FR) HG5 SGX* Gants en nitrile bleu • Pour les environnements de salles blanches • Pour usage industriel uniquement • Sans accélérateur* • Ambidextres

(DE) HG5 SGX* Nitrilhandschuhe, blau • Für Reinraumumgebungen • Nur für den industriellen Gebrauch • Beschleunigerfrei* • Beidhändig

(ES) Guantes de nitrilo azul HG5 SGX* • Para entornos de sala blanca • Solo para uso industrial • Sin aceleradores* • Ambidiestros

(IT) Guanti in nitrile blu HG5 SGX* • Per camera bianca • Solo per uso industriale • Privi di acceleranti* • Ambidestri

(NL) HG5 blå SGX* nitrilhandsker • Voor gebruik in kritieke schone ruimtes/cleanrooms • Alleen voor industrieel gebruik • Versnellervrij* • Handspecifiek

(PT) Luvas de nitrilo SGX* azul HG5 • Para ambiente de sala limpa • Exclusivamente para utilização industrial • Sem aceleradores* • Ambidestras

(RU) Нитриловые перчатки синего цвета HG5 SGX* • Для стерильных условий • Только для промышленного использования • Без химических присадок* • Амбидекстральные

(JA) HG5 ブルーSGX*ニトリル手袋・クリーンルーム環境対応・工業用途のみ・加硫促進剤不使用*・左右兼用

(KO) HG5 파란색 SGX* 니트릴 글러브 • 클린룸 환경용 • 산업용으로만 사용 • 촉진제 없음* • 양손형

(ZH) HG5 蓝色 SGX* 丁腈手套 • 适用于洁净室环境 • 仅限工业使用 • 无催化剂* • 左右手通用

Manufactured at our SAFESKIN® Facility

ACCELERATOR FREE*

XS (5.5) = CLN92512XS S (6.0 - 6.5) = CLN92512SM M (7.0 - 7.5) = CLN92512MD L (8.0 - 8.5) = CLN92512LG XL (9.0 - 10.0) = CLN92512XL	Ambidextrous							
	AQL 1.0 Level 2 GI			halyardhealth.com/information	CE 2797 (PPE Cat. III)	UK CA 0086	250	


*Not formulated with the following vulcanizing chemicals and accelerators: Sulfur, Thiurams, Thiazoles, Guanidines, Carbamates

Product of Thailand

O&M Halyard, Inc., 9120 Lockwood Blvd., Mechanicsville, VA 23116
 In USA, please call 1-844-425-9273 • halyardhealth.com
 ArcRoyal Unlimited Company, Virginia Road, Kells, Co Meath, Ireland
 O&M Halyard Belgium BV, Berkenlaan 88, 1831 Machelen (Brab.), Belgium
 UK RP: RLD Quality Limited Centenary House, Peninsula Park, Rydon Lane, Exeter, EX2 7XE, United Kingdom
 Product certified to the Regulation (EU) 2016/425 by Notified Body 2797 BSI Group The Netherlands B.V., Say Building,
 John M. Keynesplein 9, 1066 EP Amsterdam, and to the Regulation (EU) 2016/425 on personal protective equipment,
 as amended to apply in Great Britain by Approved Body BSI Assurance UK Ltd (0086) Kitemark Court, Davy Avenue, Milton Keynes, MK5 8PP.
 Sponsored in Australia by O&M Halyard Australia Pty Ltd., Tenancy 1, Level 1, Trinit 3, 39 Delhi Road, North Ryde NSW 2113
 販売元 O&M Halyard Japan合同会社 東京都港区芝公園2-6-3 芝公園フロントタワー12階
 *Registered Trademark or Trademark of O&M Halyard, Inc. or its affiliates, © 2018. All rights reserved.
 Patent and/or Pending Application, See www.halyardhealth.com/patents.

Place Label Here

PACKAGING CERTIFICATES

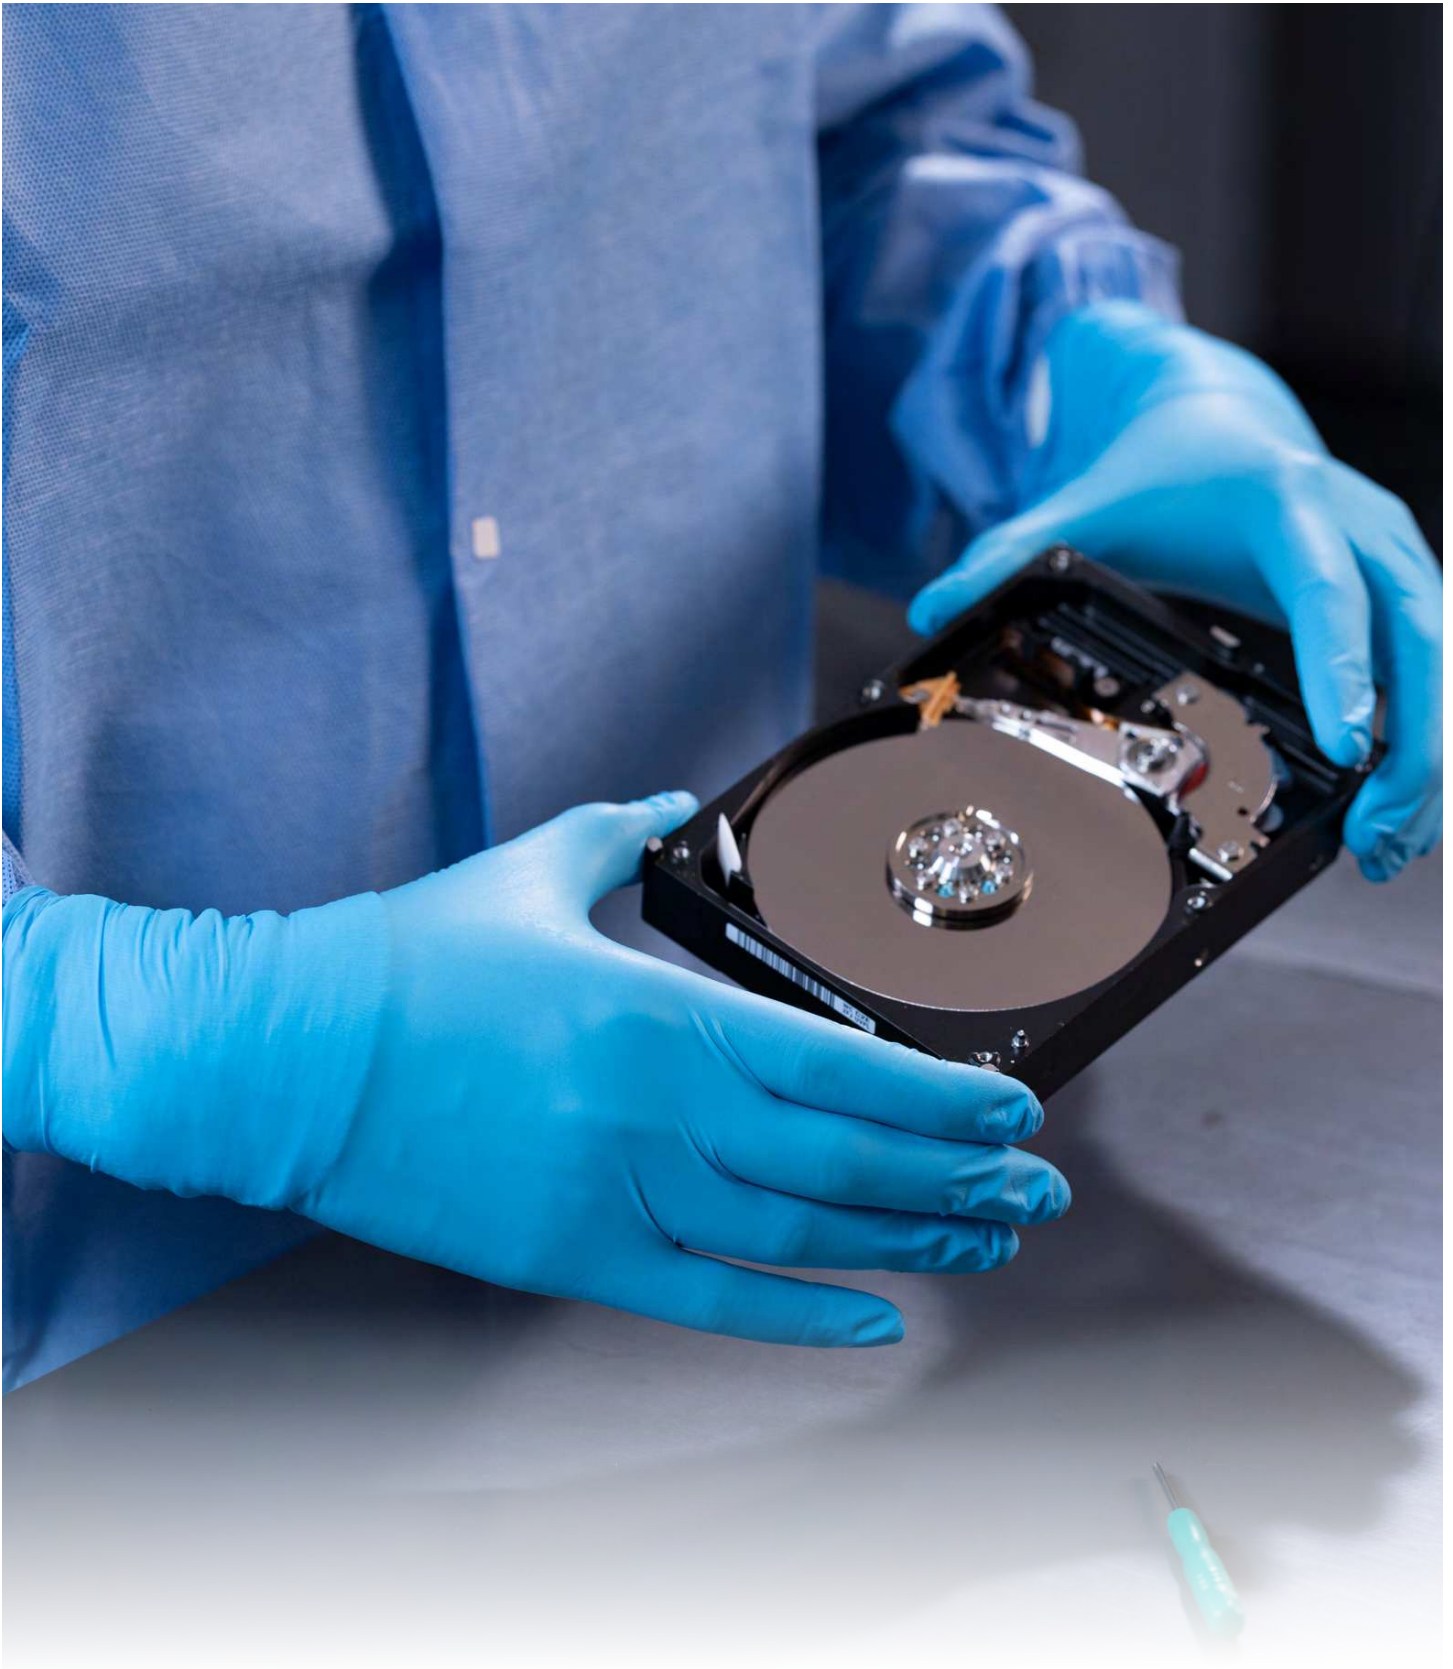



TIP CORPORATION SDN BHD

Lot 008, Jalan Sungai Sop, Batu 14,
43100 Hulu Langat, Selangor, Malaysia.
Tel: +603-9021 3985
E-mail: sales@tipcorp.com Website: www.tipcorp.com

FORM: QC-07 REV 10
Date Reviewed : 30.11.2017



CERTIFICATE OF CONFORMANCE

THIS IS TO CERTIFY THAT THE FOLLOWING PRODUCT CONFORM/PASS THE SPECIFICATION LISTED BELOW:-

CUSTOMER : SAFESKIN
DESCRIPTION : C/R EASY TEAR LDPE -PRT -355X405X0.05MM
QUANTITY : 20,000 PCS
LOT NO : 61200
PART NO : 06-HM-039-0-00
P.O NO. & DATE : 4561162599
TEST DATE : 12.07.2021
OUR INVOICE NO: TPL16374
PALLET REFERENCE
NUMBER (IF ANY):
PACKING LIST NUMBER : TPL16374
DATE OF MANUFACTURING :
DATE OF EXPIRED :

Safeskin Thailand	
D/O No.	: TPL16374
IQA Batch	: P2107139
Date	: 16-JUL-2021
Signature By	: Chals

SURFACE RESISTIVITY TEST - (Reference ASTM D257, ANSI / ESD S541 & ANSI / ESD STM 11.11)

- ☐ DISSIPATIVE : $\geq 1 \times 10^5$ AND $< 1 \times 10^{12}$ OHMS/SQ
- ☐ CONDUCTIVE : $< 1 \times 10^5$ OHMS/SQ
- ☒ VISUAL TEST
- ☒ DIMENSION CHECK (WIDTH, LENGTH & THICKNESS)
- ☐ WATER LEAK TEST
- ☒ LPC TEST
- ☒ SEAL/PEEL STRENGTH TEST
- ☒ PRINTING
- ☐ AMIDE & SILICON FREE
- ☐ CENTRE SEAL / WITH PERFORATION LINE
- ☐ NO CENTRE SEAL / WITHOUT PERFORATION

TESTED BY: *Rubaiyat*
QC DEPARTMENT

VERIFIED BY: *[Signature]*
QA EXECUTIVE



TOP IN PERFORMANCE

BAG COC

FORM QC-01 REV 5
Date Implemented: 05/04/2018
REF NO: QC-41
DATE: 12/07/2021

TIP CORPORATION SDN BHD



CUSTOMER, SUPPLIER: SAFAHIN

INCOMING QUALITY INSPECTION REPORT

OUTGOING QUALITY INSPECTION REPORT

SAMPLING PLAN 0.65 Single Plan Normal Inspection 50

Accept / Reject

13 Acc / Rej: 0/1

20 Acc / Rej: 0/1

32 Acc / Rej: 0/1

50 Acc / Rej: 0/1

Lot Qty

501 to 3,200pcs

3,201 to 35,000pcs

35,001 to 500,000pcs

500,001 pcs and over

Lot No

61200

Quantity

20,000 pcs

ITEM

CR EASY TEAR LDPE -PRT -355X405X0.05MM

PART NO

06-HM-039-0-00

DIMENSION / PHYSICAL INSPECTION										PROPERTIES OF MATERIAL											
NO	DIMENSION CHECK					THICKNESS	MAX	MIN	VISUAL	REMARKS	EASY TO OPEN	SEAL STRENGTH	PRT / GLSSET	SAMPLE NO		CONDUCTIVE	DISSSIPATIVE	INSULATOR	TEST METHOD	ASTM D 257	OTHER
	WIDTH	MAX	MIN	LENGTH	MAX									MIN	RIGHT						
1	353	360	350	405±10	415	0.05±0.01	0.05	0.04	OK	OK	OK	OK	1	10	11						
2	354			411		0.05							2	11	11						
3	353			410		0.05							3	11	10						
4	354			410		0.05							4	10	11						
5	353			411		0.05							5	11	10						
6	354			410		0.05							6	10	11						
7	353			411		0.05							7	11	10						
8	354			410		0.05							8	10	11						
9	353	OK		411	OK	0.05	OK		OK	OK	OK	OK	9	11	10						
10	354			410		0.05							10	11	11						
11	353			410		0.05							11	10	10						
12	354			410		0.05							12	11	11						
13	353			411		0.05							13	10	10						
14	354			411		0.05							14	11	11						
15	353			410		0.05							15	10	10						
16	354			411		0.05							16	11	11						
17	353			410		0.05							17	10	11						
18	354			411		0.05							18	11	10						
19	353			410		0.05							19	11	10						
20	354			411		0.05							20	10	11						
21													21								
22													22								
23													23								
24													24								
25													25								
26													26								
27													27								
28													28								
29													29								
30													30								
31													31								
32													32								

Equipment for Inspection: -

Dimension - Measuring Tape

Thickness - Thickness Checker

Surface Resistivity - SRM

SUMMARY OF OUTGOING QC INSPECTION RESULT:

Visual: OK

Seal: NO

Easy to open: OK

LPC: OK

Moist: NO

Seal Strength: OK

Water Leak Test: N/A

Printing per spec: OK

Surface Resistivity: N/A

PACKING CONDITION INSPECTION

QTY per bag: SPEC

QTY per carton: ACTUAL

Carton size: ACTUAL

PN vs Actual: ACTUAL

Label in vs Out: ACTUAL

Prepared By:

Final disposition:

Accept / Reject:



TIP CORPORATION SDN BHD

Lot 608, Jalan Sungai Sop, Batu 14,
43100 Hulu Langat, Selangor, Malaysia.
Tel: +603-9021 3985
E-mail: sales@tipcorp.com Website: www.tipcorp.com

FORM: QC-07 REV 10

Date Reviewed : 30.11.2017



CERTIFICATE OF CONFORMANCE

THIS IS TO CERTIFY THAT THE FOLLOWING PRODUCT CONFORM/PASS THE SPECIFICATION LISTED BELOW:-

CUSTOMER : SAFESKIN
DESCRIPTION : C/R EASY TEAR LDPE BAG -355X405X0.045MM
QUANTITY : 48,000 PCS
LOT NO : 61448
PART NO : 06-HM-041-0-00
P.O NO. & DATE : 4561164448
TEST DATE : 10.08.2021
OUR INVOICE NO: TPL16679
PALLET REFERENCE
NUMBER (IF ANY):
PACKING LIST NUMBER : TPL16679
DATE OF MANUFACTURING :
DATE OF EXPIRED :

Safeskin Thailand	
D/O No.	: TPL 16679
IQA Batch	: P 2108109
Date	: 14-AUG-2021
Signature By	: (Signature)

SURFACE RESISTIVITY TEST – (Reference ASTM D257, ANSI / ESD S541 & ANSI / ESD STM 11.11)

- ☐ DISSIPATIVE : $\geq 1 \times 10^5$ AND $< 1 \times 10^{12}$ OHMS/SQ
- ☐ CONDUCTIVE : $< 1 \times 10^5$ OHMS/SQ
- ☒ VISUAL TEST
- ☒ DIMENSION CHECK (WIDTH, LENGTH & THICKNESS)
- ☐ WATER LEAK TEST
- ☒ LPC TEST
- ☒ SEAL/PEEL STRENGTH TEST
- ☐ PRINTING
- ☒ AMIDE & SILICON FREE
- ☐ CENTRE SEAL / WITH PERFORATION LINE
- ☐ NO CENTRE SEAL / WITHOUT PERFORATION

TESTED BY: *Rubalyat*
QC DEPARTMENT

VERIFIED BY: *(Signature)* EXECUTIVE



TOP IN PERFORMANCE

BAG 2 COC



TIP CORPORATION SDN BHD

FORM : QC-01 REV 9
Date Implement : 05.04.2018
REF NO : QC-01
DATE : 10.08.2021

☐ IN COMING QUALITY INSPECTION REPORT
CUSTOMER / SUPPLIER : SAFESKIN

LOT NO 61448

☒ OUT GOING QUALITY INSPECTION REPORT

ITEM : C/R EASY TEAR LDPE BAG -355X405X0.045MM

QUANTITY 48,000 pcs

PART NO: 06-HM-041-0-00

SAMPLING PLAN 0.65 single Plan Normal Inspection S3

Lot Qty SS Accept / Reject
501 to 3,200pcs 13 Acc / Rej : 0/1
3,201 to 35,000pcs 20 Acc / Rej : 0/1
35,001 to 500,000pcs 32 Acc / Rej : 0/1
500,001 pcs and over 50 Acc / Rej : 0/1

DIMENSION / PHYSICAL INSPECTION												SAMPLE NO			PROPERTIES OF MATERIAL				
NO	DIMENSION CHECK						THICKNESS	MAX	MIN	VISUAL	REMARKS	EASY TO OPEN	SEAL STRENGTH	PRT / GUSSET	SAMPLE NO			CONDUCTIVE	
	WIDTH	MAX	MIN	LENGTH	MAX	MIN									NO	RIGHT	LEFT		DISSIPATIVE
SPEC	355+/-5	360	350	405+/-10	415	395	0.045+/-0.01	0.055	0.035	OK	OK	OK	OK						
1	355			410			0.047									1	11	10	TEST METHOD
2	354			409			0.047									2	10	10	INSULATOR
3	355			410			0.048									3	10	11	(ASTM D 257)
4	354			410			0.047									4	11	10	OTHER
5	355			409			0.048									5	10	10	Remarks :
6	354			410			0.047									6	11	11	2 side seal-seal width 10mm min
7	355			409			0.048									7	11	10	
8	354			410			0.047									8	10	11	
9	355			409			0.048									9	11	10	For Incoming visual :
10	354			410			0.047									10	11	11	Bag no torn , damaged - Accept
11	355			409			0.048									11	10	10	Reject for the bag is broken
12	354			410			0.047									12	11	11	
13	355			409			0.048									13	10	10	Equipment for Inspection : -
14	354			410			0.047									14	11	11	Dimension - Measuring Tape
15	355			409			0.048									15	10	11	Thickness - Thickness Checker
16	355	OK		410	OK		0.047	OK		OK	OK	OK	OK			16	11	10	Surface Resistivity - SRM
17	354			409			0.048									17	11	11	SUMMARY OF OUTGOING QC
18	355			410			0.047									18	10	10	INSPECTION RESULT :
19	354			409			0.048									19	11	11	Visual : OK MVTR- N/A
20	354			410			0.047									20	11	10	Sticky : NO Easy to open: OK
21	355			409			0.047									21	10	11	LPC : OK Mixed: NO
22	354			410			0.048									22	11	10	Seal Strength : OK Water Leak Test N/A
23	355			409			0.047									23	10	11	Printing per spec: N/A
24	354			409			0.048									24	11	10	Surface Resistivity: N/A
25	354			410			0.047									25	10	11	
26	355			410			0.048									26	11	10	PACKING CONDITION INSPECTION
27	354			409			0.048									27	10	11	SPEC ACTUAL
28	355			410			0.047									28	10	10	Qty per bag
29	354			409			0.048									29	11	11	Qty per carton
30	355			410			0.047									30	10	10	Carton size
31	354			409			0.048									31	10	11	PN vs Actual
32	354			410			0.048									32	11	11	Label In vs Out

REMARKS :

ACCEPT

REJECT

Prepared By :

Final disposition :

Accept / Reject :

Verified By :

Final Disposition :

Accept / Reject :

BAG 2 COC



TIP Corporation Sdn. Bhd.
Lot 608, Jalan Sg Sop, Off Jalan Sg Tekali, Batu
14 Hulu Langat, 43100 Selangor, MY.

Tel : +603-90213985 / 6 / 7 Fax : +603-90213982/4 Email: sales@tipcorp.com

FORM QC-21

LPC Test Report

Item	: C/R EASY TEAR LDPE I Lot No	: 61448
Testing Date	: 10.8.2021	size : 355 X 405 X 0.05MM
Customer	: SAFESKIN	OUTGOING
Blank Particle Counts (Cumulative)		06-HM-041-0-00
	Blank Cts 1 Counts/ml	Blank Cts 2 Counts/ml
0.5 micron	20.0	19.0
1.0 micron	3.0	4.0
1.5 micron	2.0	4.0
2.0 micron	1.0	2.0
		Blank Ct 3 Counts/ml
		17.0
		Average Blank (A) Counts/ml
		18.7
		3.0
		2.7
		4.0
		2.3 Total counts
		26.666667

Wash Sample Particle Counts (Cumulative)

	Washed Cts 1 Counts/ml	Washed Cts 2 Counts/ml	Washed Cts 3 Counts/ml	Average Washed (B) Counts/ml
0.5 micron	80.0	95.0	100.0	91.7
1.0 micron	13.0	14.0	17.0	14.7
1.5 micron	9.0	8.0	7.0	8.0
2.0 micron	5.0	7.0	9.0	7.0 Total counts
				121.33333

Wet Particle Counts

Ave. Washed - Ave. Blank (C = B - A)

(C)

Total Vol. for Washed Sample

(D)

Washed Volume (ml) 400 ml

0.5 micron	73.0
1.0 micron	11.7
1.5 micron	5.3
2.0 micron	4.7

Total Area of Plastic

(E)

Total Area for wash 2947 cm²

Total Particle Counts in Washed Volume

(F)


Total Wet Part Cts / cm²

(G)

(F = C x D)

(G = F / E)

0.5 micron	29200	0.5 micron	9.9083814
1.0 micron	4666.6667	1.0 micron	1.5835313
1.5 micron	2133.3333	1.5 micron	0.7239
2.0 micron	1866.6667	2.0 micron	0.6334125

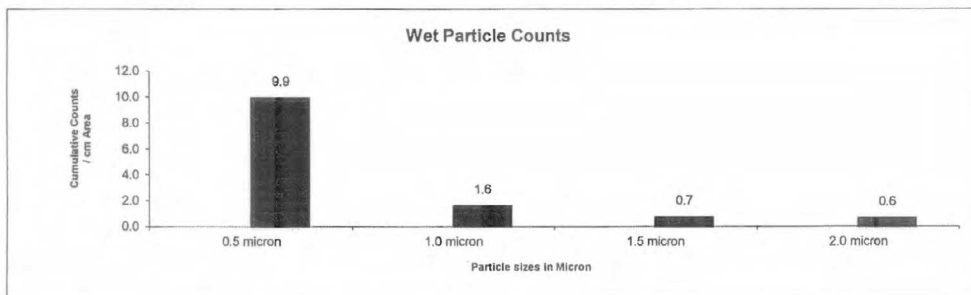

Total Particle : 12.8492252

SPEC: $\geq 0.5\mu \leq 100$ COUNTS/CM²

Tested By : **MARIAM**

Date : 10.8.2021

Verified By :

Date :

[Signature]
10/8/2021

CASE LINER COC



TIP CORPORATION SDN BHD

Lot 2288, Jalan P4/8, Bandar Teknologi Kajang,
Semenyih, 43500 Selangor, Malaysia.
Tel: +603-8723 7889
E-mail: sales@tipcorp.com Website: www.tipcorp.com
SST No: W24-1808-21017734

FORM: QC-07 REV 10

Date Reviewed : 30.11.2017

Reg No: 109091010224
1187330-A1



CERTIFICATE OF CONFORMANCE

THIS IS TO CERTIFY THAT THE FOLLOWING PRODUCT CONFORM/PASS THE SPECIFICATION LISTED BELOW:-

CUSTOMER : SAFESKIN

DESCRIPTION : CLEANROOM LDPE BAG WITH GUSSET 350 X 700 X 0.04mm + G150mm

QUANTITY : 20,000 PCS

LOT NO : K61449

PART NO : 06-HM-042-0-00

P.O NO. & DATE : 4561163570

TEST DATE : 06.08.2021

OUR INVOICE NO: TPL16653

PALLET REFERENCE
NUMBER (IF ANY): -

PACKING LIST NUMBER : TPL16653

DATE OF MANUFACTURING : N/A

DATE OF EXPIRED : N/A

Safeskin Thailand

D/O No. : TPL16653
IQA Batch : P3108087
Date : 11-AUG-2021
Signature By : [Signature]

SURFACE RESISTIVITY TEST – (Reference ASTM D257, ANSI / ESD S541 & ANSI / ESD STM 11.11)

- ☐ DISSIPATIVE : $\geq 1 \times 10^5$ AND $< 1 \times 10^{12}$ OHMS/SQ
- ☐ CONDUCTIVE : $< 1 \times 10^5$ OHMS/SQ
- ☒ VISUAL TEST
- ☒ DIMENSION CHECK (WIDTH, LENGTH & THICKNESS)
- ☐ WATER LEAK TEST
- ☒ LPC TEST
- ☒ SEAL/PEEL-STRENGTH TEST
- ☐ PRINTING
- ☒ AMIDE & SILICON FREE
- ☐ CENTRE SEAL / WITH PERFORATION LINE
- ☐ NO CENTRE SEAL / WITHOUT PERFORATION

TESTED BY: [Signature]

VERIFIED BY: [Signature]



TOP IN PERFORMANCE

CASE LINER COC



TIP CORPORATION SDN BHD

FORM : QC-01 REV 9
 Date Implement : 05.04.2018
 REF NO : QC-01
 DATE : 06.08.2021

☐ IN COMING QUALITY INSPECTION REPORT

CUSTOMER / SUPPLIER : **SAFESKIN MEDICAL**

ITEM : **CLEANROOM LDPE BAG 350 X 700 X 0.04mm + G150mm**

PART NO: 06-HM-042-0-00

☒ OUT GOING QUALITY INSPECTION REPORT

LOT NO : **K61449**

QUANTITY : **20,000 PCS**

SAMPLING PLAN 0.65 single Plan Normal Inspection S3

Lot Qty	55	Accept / Reject
501 to 3,200pcs	13	Acc / Rej : 0/1
3,201 to 35,000pcs	20	Acc / Rej : 0/1
35,001 to 500,000pcs	32	Acc / Rej : 0/1
500,001 pcs and over	50	Acc / Rej : 0/1

DIMENSION / PHYSICAL INSPECTION															SURFACE RESISTIVITY DATA (EQUIPMENT - SRM110)			PROPERTIES OF MATERIAL	
NO	DIMENSION CHECK									VISUAL OK/NG	REMARKS	EASY TO OPEN	SEAL STRENGTH	PRT / GUSSET	SAMPLE NO			CONDUCTIVE ☐	
	WIDTH	MAX	MIN	LENGTH	MAX	MIN	THICKNESS	MAX	MIN						OHM/SQ	NO	INSIDE		OUTSIDE
SPEC	350±5mm	355mm	345mm	700±10mm	710mm	690mm	0.04±0.01mm	0.05mm	0.03mm	OK				150mm±10MM				INSULATOR ☐	
1	351			702			0.05							151	1				
2	351			701			0.04							152	2			TEST METHOD (ASTM D 257) ☐	
3	350			702			0.04							152	3				
4	350			702			0.04							150	4			OTHER ☐	
5	351			701			0.05							152	5				
6	350			702			0.04							152	6			Remarks : ACCEPT	
7	351			702			0.04							152	7				
8	351			701			0.04							150	8				
9	350	OK	OK	702	OK	OK	0.05	OK	OK	OK		OK	OK	152	9				
10	350	↑	↑	702	↑	↑	0.04	↑	↑	↑		↑	↑	150	10				
11	351			701			0.04							152	11				
12	350			702			0.04							152	12				
13	351			702			0.05							152	13				
14	351			701			0.04							152	14				
15	350			702			0.05							150	15				
16	350			702			0.04							152	16				
17	351			701			0.04							150	17				
18	350			702			0.04							152	18				
19	351			702			0.05							152	19				
20	351			702			0.04							151	20				
21															21				
22															22				
23															23				
24															24				
25															25				
26															26				
27															27				
28															28				
29															29				
30															30				
31															31				
32															32				

REMARKS : ACCEPT ☒ REJECT ☐

Prepared By : 

Final Disposition : **OK**

Accept / Reject : **Accept**

PACKING CONDITION INSPECTION

	SPEC	ACTUAL
Qty per bag	50PCS	50PCS
Qty per carton	500PCS	500PCS
Carton size	T10	T10
PN vs Actual	06-HM-042-0-00	06-HM-042-0-00
Label In vs Out	OK	OK

Verified By : **HAJAR**

Final Disposition : **OK**

Accept / Reject : **Accept**

CASE LINER COC



TIP CORPORATION SDN BHD

Lot 2288, Jalan P4/8, Bandar Teknologi Kajang,
Semenyih, 43500 Selangor, Malaysia.
Tel: +603-8723 7889
E-mail: sales@tipcorp.com Website: www.tipcorp.com
SST No: W24-1808-21017734



FORM QC-21

LPC Test Report

Item: C/R LDPE BAG

Lot No: K61449

Testing Date: 06.08.2021

Size: 650X700X0.04MM

Customer: SAFESKIN

Method: BY SHAKER

Blank Particle Counts (Cumulative)

Machine: KCCS-6

	Blank Cts 1	Blank Cts 2	Blank Ct 3	Average Blank (A)	
	Counts	Counts	Counts	Counts	
0.5 micron	4.0	2.0	0.0	2.0	
1.0 micron	1.0	0.0	0.0	0.3	
2.0 micron	0.0	0.0	0.0	0.0	
5.0 micron	0.0	0.0	0.0	0.0 Total counts	2.3

Wash Sample Particle Counts (Cumulative)

	Washed Cts 1	Washed Cts 2	Washed Cts 3	Average Washed (B)	
	Counts	Counts	Counts	Counts	
0.5 micron	124.0	134.0	112.0	123.3	
1.0 micron	21.0	26.0	19.0	22.0	
2.0 micron	8.0	5.0	8.0	7.0	
5.0 micron	2.0	2.0	2.0	2.0 Total counts	154.3

(C) Wet Particle Counts

Ave. Washed - Ave. Blank (C = B - A)

0.5 micron	121.3
1.0 micron	21.7
2.0 micron	7.0
5.0 micron	2.0

(D) Total Vol. for Washed Sample

Washed Volume (ml) 1000 ml

(E) Sampling size

5 ml

(F) Total Area of Plastic


Total Washed Area 8775 cm²

(G) Particle counts per ml (G = C / E)

0.5 micron	24.267
1.0 micron	4.333
2.0 micron	1.400
5.0 micron	0.400

(H) Total Wet Part Cts / cm² (H = G X D / F)

0.5 micron	2.765
1.0 micron	0.494
2.0 micron	0.160
5.0 micron	0.046

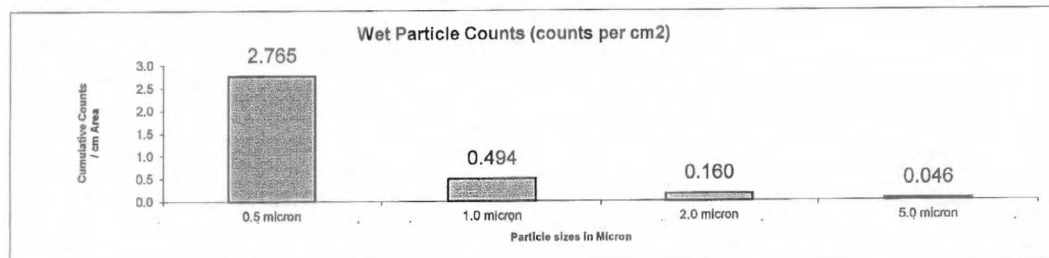

Total Particle (≥0.5): 3.464 (PASSED)

SPEC: ≥ 0.5u ≤ 100 COUNTS/CM²

Tested By: SUHAIDA

Date: 06.08.2021

Verified By:

Date: 06.08.2021

SAFETY DATA SHEET





SAFETY DATA SHEET

HALYARD* PUREZERO* HG5 Nitrile Gloves

1. IDENTIFICATION

Product Name: **HALYARD* PUREZERO* HG5 Nitrile Gloves**

Product Number: Various

Date Prepared:	5/17/2023
Manufacturer:	O&M Halyard, Inc. 1 Edison Dr. Alpharetta, Georgia 30005
Telephone: MEDICAL EMERGENCY: TRANSPORTATION EMERGENCY: INFORMATION:	Call 911 or your local Emergency Room or Poison Control Services Chemtrec 1-800-424-9300 or 1-703-527-3887 (collect calls accepted) 1-844-HALYARD

Product Use: Protective gloves.

2. HAZARDS IDENTIFICATION

GHS Classification: Not Hazardous. These products are manufactured articles or articles as this term is defined in the OSHA Hazard Communication Standard (29CFR 1910.1200), EU REACH, Canadian WHMIS, Australia WHS and the GHS. These products are out of the scope of the GHS and no SDS or labeling are required.

GHS Labeling: No GHS labeling required.

3. COMPOSITION/INFORMATION ON INGREDIENTS

<i>Chemical Name</i>	<i>CAS-No./ EINECS-No</i>	<i>%</i>	<i>GHS Classification:</i>
Non-Hazardous Ingredients	Mixture	100	Not Hazardous

4. FIRST AID MEASURES

Inhalation: No first aid needed.

Skin contact: No first aid needed. These products are intended to be used in contact with the skin.

Eye contact: No first aid needed.

Ingestion: Not a relevant route of exposure.

Most Important symptoms and effects, both acute and delayed: No adverse effects.

Indication of any immediate medical attention and special treatment needed: None required.



SAFETY DATA SHEET

HALYARD* PUREZERO* HG5 Nitrile Gloves

5. FIRE-FIGHTING MEASURES

Suitable (and unsuitable) Extinguishing Media: Use media suitable for surrounding materials.

Specific Hazards Arising from the Chemical: These products can melt in a fire. Molten material may flow or drip and spread the fire.

Hazardous Combustion Products: Combustion may produce toxic and irritating gases and vapors.

Special Protective Equipment and Precautions for Fire-fighters: None required.

6. ACCIDENTAL RELEASE MEASURES

Personal Precautions, Protective Equipment, and Emergency Procedures: None required.

Environmental Precautions: None required.

Methods and Materials for Containment and Cleaning Up: No special precautions required. Pick up and dispose of in an appropriate container.

7. HANDLING AND STORAGE

Precautions for Safe Handling: No special handling is required.

Conditions for Safe Storage, including any Incompatibilities: Store away from heat and flames.

8. EXPOSURE CONTROLS / PERSONAL PROTECTION

Exposure limit(s)

Chemical Name	Exposure limit(s)
Non-Hazardous Ingredients	None established

Appropriate Engineering Controls: None required.

Individual Protection Measures, such as Personal Protective Equipment:

Respiratory Protection: None required.

Protective Gloves: None required.

Eye Protection: None required.

9. PHYSICAL AND CHEMICAL PROPERTIES

Appearance and Odor	Solid Gloves, blue or white
Odor Threshold:	Not applicable
Boiling point/range	Not applicable
Melting point/range	Not determined
Relative Density (water=1)	Not determined
Vapor pressure	Not applicable
Vapor density (air=1)	Not applicable
Solubility	Insoluble
pH	Not applicable
Partition coefficient (n-octanol/water):	Not applicable
Evaporation Rate (Butyl acetate=1)	Not applicable
Viscosity:	Not applicable
Volatile Organic Carbon Compounds (VOC) (g/L)	Not applicable
Flashpoint:	None.
Flammable Limits in Air % by Volume:	LEL (Lower): Not applicable UEL (Upper): Not applicable
Autoignition temperature:	Not determined.
Decomposition temperature:	Not determined
Flammability (solid, gas):	Not a flammable solid

10. STABILITY AND REACTIVITY

Reactivity: Not reactive.

Chemical Stability: Stable at ambient temperature and pressure.

Possibility of Hazardous Reactions: None known.

Conditions to Avoid: Avoid heat and flames.

Incompatible Materials: None known.

Hazardous Decomposition Products: Thermal decomposition may produce carbon and nitrogen oxides and unidentified hydrocarbon fragments.



SAFETY DATA SHEET

HALYARD PUREZERO* HG5 Nitrile Gloves*

11. TOXICOLOGICAL INFORMATION

Symptoms/Effects of Overexposure: These gloves are manufactured articles. Their use will not result in exposure to any hazardous materials.

Inhalation: Not applicable.

Skin contact: None. Intended for skin contact. These products contain no natural latex.

Eye contact: None expected.

Ingestion: Not applicable.

Chronic toxicity: None expected.

Carcinogenicity Data: None of the components of this product is listed as a carcinogen by IARC, NTP, US OSHA or the EU CLP Annex VI.

Reproductive Toxicity: None known.

Numerical Measures of Toxicity:
Not acutely toxic.

12. ECOLOGICAL INFORMATION

Ecotoxicity: These gloves are manufactured articles. Their use will not result in adverse environmental effects.

Persistence and Degradability: Not degradable.

Bioaccumulative Potential: Not bioaccumulative.

Mobility in Soil: Not mobile.

Other Adverse Effects: None currently known.

13. DISPOSAL CONSIDERATIONS

Dispose in accordance with all state, local and federal regulations. If unused, the product may be disposed of as a non-hazardous material.

14. TRANSPORT INFORMATION

US DOT Shipping Description: Not regulated

IATA Shipping Description (Air): Not regulated

IMDG Shipping Description (Vessel): Not regulated

15. REGULATORY INFORMATION

US Regulations

EPA Toxic Substances Control Act (TSCA): These gloves are articles and exempt from the TSCA regulations.

SARA 302 Listed Chemicals: None.

SARA 311/312 Hazard Categories: Not applicable to articles

SARA 313 This Product Contains the Following Chemicals Subject to Annual Release Reporting Requirements Under the SARA Section 313 (40 CFR 372): Not applicable to articles.

16. OTHER INFORMATION

Date Prepared: 5/17/2023

HMIS Rating: Health 0 Fire 1 Physical Hazard 0

The information contained herein is true and correct to the best of O&M Halyard, Inc's knowledge. However, no warranty, expressed or implied, is made. Nothing herein should be interpreted as a recommendation to infringe existing patents or violate any laws or regulations. Final determination of the suitability of the material is the sole responsibility of the user.



July 11, 2023

RE: HALYARD* PUREZERO* HG3 and HG5 Cleanroom Nitrile Gloves

O&M Halyard, Inc. confirms that our Halyard **PUREZERO*** HG3 and Halyard **PUREZERO** HG5 Nitrile Cleanroom Glove families are fully compliant with the related requirements of the European Union Regulation (EC) 1907/2006 concerning Registration, Evaluation, Authorization, and Restriction of Chemicals (REACH).

O&M Halyard, Inc. hereby confirms that our Halyard **PUREZERO*** HG3 and Halyard **PUREZERO** HG5 Nitrile Cleanroom Gloves either do not contain the presence of greater than 0.1% of substances identified on the SVHC Candidate list according to Article 33 of the REACH Regulation and/or do not contain any of the listed substances.

Thank you for your interest in Halyard products. If you have any questions or need additional information, please do not hesitate to contact us at PIQ@hyh.com or call us directly at (844) 425-9273.

Sincerely,

A handwritten signature in black ink that reads 'Caitlin Senter'.

Caitlin Senter

Director
Global Regulatory Affairs
O&M Halyard, Inc.

HALYARD* PUREZERO* HG3 White Nitrile Gloves

CLN3031XS
CLN3031SM
CLN3031MD
CLN3031LG
CLN3031XL

HALYARD* PUREZERO* HG3 Light Blue Nitrile Gloves

CLN9031XS
CLN9031SM
CLN9031MD
CLN9031LG
CLN9031XL

HALYARD* PUREZERO* HG3 White SGX* Nitrile Gloves

CLN3231XS
CLN3231SM
CLN3231MD
CLN3231LG
CLN3231XL

HALYARD* PUREZERO* HG3 Light Blue Sterile Nitrile Gloves

6.0 CLN923260
6.5 CLN923265
7.0 CLN923270
7.5 CLN923275
8.0 CLN923280
8.5 CLN923285
9.0 CLN923290
10.0 CLN923210

HALYARD* PUREZERO* HG3 White Sterile Nitrile Gloves

6.0 CLN323260
6.5 CLN323265
7.0 CLN323270
7.5 CLN323275
8.0 CLN323280
8.5 CLN323285
9.0 CLN323290
10.0 CLN323210

Description	Code
HALYARD* PUREZERO* HG5 White Nitrile Gloves	CLN30512XS
	CLN30512SM
	CLN30512MD
	CLN30512LG
	CLN30512XL
HALYARD* PUREZERO* HG5 Blue SGX* Nitrile Gloves	CLN92512XS
	CLN92512SM
	CLN92512MD
	CLN92512LG
	CLN92512XL

*Registered Trademark or Trademark of O&M Halyard or its affiliates. ©2023. All rights reserved. COPY-04686



Certificate of Registration

QUALITY MANAGEMENT SYSTEM - ISO 9001:2015

This is to certify that:

Safeskin Medical & Scientific
(Thailand) Ltd.
200 Moo 8, Kanchanavanich Road,
Tambol Prik, Amphur Sadao,
Songkhla
90120
Thailand

Holds Certificate Number:

FM 697757

and operates a Quality Management System which complies with the requirements of ISO 9001:2015 for the following scope:

Design and Development, Production and Distribution of Industrial Gloves-Sterile and Non-Sterile Examination Gloves.

For and on behalf of BSI:

Chris Cheung, Head of Compliance & Risk - Asia Pacific

Original Registration Date: 2018-08-12

Latest Revision Date: 2021-07-16

Effective Date: 2021-08-12

Expiry Date: 2024-08-11

Page: 1 of 2



...making excellence a habit.™

This certificate was issued electronically and remains the property of BSI and is bound by the conditions of contract.

An electronic certificate can be authenticated [online](https://www.bsi-global.com/ClientDirectory).

Printed copies can be validated at www.bsi-global.com/ClientDirectory or telephone +66(2) 2944889-92.

Further clarifications regarding the scope of this certificate and the applicability of ISO 9001:2015 requirements may be obtained by consulting the organization.

This certificate is valid only if provided original copies are in complete set.

ISO 9001:2015 (continued)

Certificate No: **FM 697757**

Location

Safeskin Medical & Scientific
(Thailand) Ltd.
200 Moo 8, Kanchanavanich Road,
Tambol Prik, Amphur Sadao,
Songkhla
90120
Thailand

Registered Activities

Design and Development, Production and Distribution of
Industrial Gloves-Sterile and Non-Sterile Examination Gloves.

Including the following support function:
Owens & Minor Halyard Incorporation, 5405 Windward
Parkway, Alpharetta, GA, USA : Design and Development of
Industrial Gloves-Sterile and Non-Sterile Examination Gloves.



Original Registration Date: 2018-08-12

Latest Revision Date: 2021-07-16

Effective Date: 2021-08-12

Expiry Date: 2024-08-11

Page: 2 of 2

This certificate was issued electronically and remains the property of BSI and is bound by the conditions of contract.

An electronic certificate can be authenticated [online](#).

Printed copies can be validated at www.bsi-global.com/ClientDirectory or telephone +66(2) 2944889-92.

Further clarifications regarding the scope of this certificate and the applicability of ISO 9001:2015 requirements may be obtained by consulting the organization. This certificate is valid only if provided original copies are in complete set.

Information and Contact: BSI, Kitemark Court, Davy Avenue, Knowlhill, Milton Keynes MK5 8PP. Tel: + 44 345 080 9000
BSI Assurance UK Limited, registered in England under number 7805321 at 389 Chiswick High Road, London W4 4AL, UK.
A Member of the BSI Group of Companies.



By Royal Charter

Certificate of Registration

QUALITY MANAGEMENT SYSTEM - ISO 13485:2016 & EN ISO 13485:2016

This is to certify that:

O & M Halyard, Inc.
9120 Lockwood Blvd
Mechanicsville
Virginia
23116
USA

Holds Certificate Number:

MD 735497

and operates a Quality Management System which complies with the requirements of ISO 13485:2016 & EN ISO 13485:2016 for the following scope:

Design, development, manufacture and distribution of sterile and non-sterile medical examination gloves.

For and on behalf of BSI:

Graeme Tunbridge, Senior Vice President Medical Devices

Original Registration Date: 2020-11-25

Latest Revision Date: 2023-01-05

Effective Date: 2023-01-09

Expiry Date: 2026-01-08



Page: 1 of 2

...making excellence a habit.™

This certificate was issued electronically and remains the property of BSI and is bound by the conditions of contract.
An electronic certificate can be authenticated [online](https://www.bsigroup.com/ClientDirectory).
Printed copies can be validated at www.bsigroup.com/ClientDirectory

Information and Contact: BSI, Kitemark Court, Davy Avenue, Knowlhill, Milton Keynes MK5 8PP. Tel: +44 345 080 9000
BSI Assurance UK Limited, registered in England under number 7805321 at 389 Chiswick High Road, London W4 4AL, UK.
A Member of the BSI Group of Companies.

ISO 13485:2016 (continued)

Certificate No: **MD 735497**

Location	Registered Activities
O & M Halyard, Inc. 9120 Lockwood Blvd Mechanicsville Virginia 23116 USA	Headquarter management activities.
O & M Halyard, Inc. 1 Edison Drive Alpharetta Georgia 30005 USA	The design and development of sterile and non-sterile medical examination gloves.
Safeskin Medical & Scientific (Thailand) Ltd. 200 Moo 8, Kanchanavanich Road, Tambol Prik, Amphur Sadao, Songkhla 90120 Thailand	Design, development, manufacture and distribution of sterile and non-sterile medical examination gloves.

Original Registration Date: 2020-11-25

Latest Revision Date: 2023-01-05

Effective Date: 2023-01-09

Expiry Date: 2026-01-08

Page: 2 of 2

This certificate was issued electronically and remains the property of BSI and is bound by the conditions of contract.
An electronic certificate can be authenticated [online](https://www.bsigroup.com/ClientDirectory).
Printed copies can be validated at www.bsigroup.com/ClientDirectory

Information and Contact: BSI, Kitemark Court, Davy Avenue, Knowlhill, Milton Keynes MK5 8PP. Tel: + 44 345 080 9000
BSI Assurance UK Limited, registered in England under number 7805321 at 389 Chiswick High Road, London W4 4AL, UK.
A Member of the BSI Group of Companies.



Certificate of Registration

ENVIRONMENTAL MANAGEMENT SYSTEM - ISO 14001:2015

This is to certify that:

Safeskin Medical & Scientific
(Thailand) Ltd.
200 Moo 8, Kanchanavanich Road,
Tambol Prik, Amphur Sadao,
Songkhla
90120
Thailand

Holds Certificate Number:

EMS 772160

and operates an Environmental Management System which complies with the requirements of ISO 14001:2015 for the following scope:

The Manufacturing of Medical and Scientific Gloves.

For and on behalf of BSI:

Michael Lam - Managing Director Assurance, APAC

Original Registration Date: 2022-10-27

Effective Date: 2022-10-27

Latest Revision Date: 2022-10-27

Expiry Date: 2025-10-26



Page: 1 of 1

...making excellence a habit.™

This certificate was issued electronically and remains the property of BSI and is bound by the conditions of contract.
An electronic certificate can be authenticated [online](https://www.bsi-global.com/ClientDirectory).
Printed copies can be validated at www.bsi-global.com/ClientDirectory or telephone +66(2) 2944889-92.
Further clarifications regarding the scope of this certificate and the applicability of ISO 14001:2015 requirements may be obtained by consulting the organization.
This certificate is valid only if provided original copies are in complete set.

Information and Contact: BSI, Kitemark Court, Davy Avenue, Knowlhill, Milton Keynes MK5 8PP. Tel: + 44 345 080 9000
BSI Assurance UK Limited, registered in England under number 7805321 at 389 Chiswick High Road, London W4 4AL, UK.
A Member of the BSI Group of Companies.



May 4, 2023

RE: **HALYARD* PUREZERO* HG3 and HG5 Nitrile Gloves**

Dear Valued Customer,

This letter is in response to your recent accelerator-free inquiry for the **HALYARD* PUREZERO* HG3 and HG5 Nitrile Gloves**.

The following gloves are accelerator-free and are not formulated with the following vulcanizing chemicals and accelerators: Sulfur, Thiurams, Thioxoles, Guanidines, Carbamates.[†]

HALYARD* PUREZERO* HG3 White Nitrile Gloves
HALYARD* PUREZERO* HG3 Light Blue Nitrile Gloves
HALYARD* PUREZERO* HG3 White SGX* Nitrile Gloves
HALYARD* PUREZERO* HG3 White Sterile Nitrile Gloves
HALYARD* PUREZERO* HG3 Light Blue Sterile Nitrile Gloves

HALYARD* PUREZERO* HG5 White Nitrile Gloves
HALYARD* PUREZERO* HG5 Blue SGX* Nitrile Gloves

Thank you for your interest in Halyard products. If you have any questions or need additional information, please do not hesitate to contact us at PIQ@hyh.com or call us directly at (844) 425-9273.

Sincerely,

Shannon Smith

Shannon Smith
Associate Product Manager
O&M Halyard, Inc.

[†] The chemicals and accelerators shown is not a comprehensive list.

*Registered Trademark or Trademark of O&M Halyard or its affiliates.

COPY-04632



May 9th, 2023

RE: **HALYARD* PUREZERO* HG5 Nitrile Gloves**

Dear Valued Customer,

This letter is in response to your recent inquiry regarding food contact testing of **HALYARD* PUREZERO* HG5 Nitrile Gloves**.

The following gloves have been tested against the **Commission Regulation (EU) No 10/2011 of 14 January 2011 on plastic materials and articles intended to come into contact with food, 21 CFR 177.2600** for "Rubber Articles Intended for Repeated Use" of Part 177 - Indirect Food Additives: Polymers. And **21 CFR 180.22** of "Food and Drugs" Part 180 - FOOD ADDITIVES PERMITTED IN FOOD OR IN CONTACT WITH FOOD ON AN INTERIM BASIS PENDING ADDITIONAL STUDY: Acrylonitrile copolymers.

HALYARD* PUREZERO* HG5 White Nitrile Gloves
HALYARD* PUREZERO* HG5 Blue SGX* Nitrile Gloves

To simulate aqueous foods (distilled water) and fatty foods (n-Hexane), the results below reflect testing in accordance with **21 CFR 177.2600** for "Rubber Articles Intended for Repeated Use" of Part 177 - Indirect Food Additives: Polymers for (e) and (f):

Products	Extraction Times	Extraction Solvent	Extractable Content (mg/in ²)	Requirement (mg/in ²)	Pass/Fail
HALYARD* PUREZERO* HG5 White Nitrile Gloves	First 7 Hours	Distilled Water	1.4	20	Pass
	Next 2 Hours		0.1	1	Pass
	First 7 Hours	n-Hexane	1.6	175	Pass
	Next 2 Hours		0.4	4	Pass
HALYARD* PUREZERO* HG5 Blue SGX* Nitrile Gloves	First 7 Hours	Distilled Water	1.1	20	Pass
	Next 2 Hours		0.2	1	Pass
	First 7 Hours	n-Hexane	0.9	175	Pass
	Next 2 Hours		0.4	4	Pass

*Registered Trademark or Trademark of O&M Halyard or its affiliates.

COPY-04650

Based on extraction conditions of 40°C for 2 hours, the results below reflect testing in accordance with **21 CFR 180.22** of "Food and Drugs" Part 180 - FOOD ADDITIVES PERMITTED IN FOOD OR IN CONTACT WITH FOOD ON AN INTERIM BASIS PENDING ADDITIONAL STUDY: Acrylonitrile copolymers.

Products	Solvent	Acrylonitrile (ppm)	0.2 ppm Low Spike
HALYARD* PUREZERO* HG5 White Nitrile Gloves	Water	<0.26	*
	n-Heptane	<0.05	**
HALYARD* PUREZERO* HG5 Blue SGX* Nitrile Gloves	Water	<0.26	*
	n-Heptane	<0.05	**
*Recovery of Acrylonitrile Monomer spike at approximately 64.3%			
**Recovery of Acrylonitrile Monomer spike at approximately 88.8%			


Based on extraction conditions of 40°C for 2 hours, the results below reflect testing in accordance with Commission Regulation (EU) No 10/2011 of 14 January 2011 on plastic materials and articles intended to come into contact with food.

Products	Extraction Solvent	Food Simulant Abbreviation	Mean Global Migration (mg/dm ²)	Requirement (mg/dm ²)	Pass/Fail
HALYARD* PUREZERO* HG5 White Nitrile Gloves	Acetic Acid, 3%	Food Simulant B	2.77	≤10	Pass
	Ethanol, 20%	Food Simulant C	4.9		Pass
	Sunflower Oil	Food Simulant D2	3.45		Pass
HALYARD* PUREZERO* HG5 Blue SGX* Nitrile Gloves	Acetic Acid, 3%	Food Simulant B	4.63	≤10	Pass
	Ethanol, 20%	Food Simulant C	3.01		Pass
	Sunflower Oil	Food Simulant D2	2.86		Pass


**Not Detectable: The test result is below the detectable level or quantification limit of the test method and/or equipment.

Thank you for your interest in Halyard products. If you have any questions or need additional information, please do not hesitate to contact us at PIQ@hyh.com or call us directly at (844) 425-9273.

Sincerely,



Caitlin Senter
Director
Global Regulatory Affairs
O&M Halyard, Inc.



Nimia Maya
R&D Engineer
Global Research and Development
O&M Halyard, Inc.

*Registered Trademark or Trademark of O&M Halyard or its affiliates.

COPY-04650

HG5 Nitrile Cleanroom Gloves

ADDED PROTECTION FROM THE RISK OF CHEMICAL EXPOSURE

It's critical to protect staff from exposure to potentially hazardous chemicals and chemotherapy drugs. In addition to providing a barrier to chemical splash, microorganisms and viruses, **PUREZERO* HG5 Cleanroom Gloves are now tested against 2 chemotherapy drugs and 21 chemicals.**

CHEMOTHERAPY DRUG RESISTANCE GUIDE⁴

Chemotherapy Agent (Concentration in mg/ml)	PUREZERO* HG5 White Nitrile Gloves 12"		PUREZERO* HG5 Blue SGX* Nitrile Gloves 12"	
	Minimum Breakthrough Time (minutes)	Permeation Rate (µg/cm²/min)	Minimum Breakthrough Time (minutes)	Permeation Rate (µg/cm²/min)
Carmustine (BCNU) (3.3)	119	0.1	117.7	0.05
Thiotepa (1.0)	69.4	0.02	46.7	0.02

Use the rating system below to determine the chemotherapy compatibility for exposure:

<10	Not recommended for use - breakthrough can occur in less than 10 minutes.
11 - 239	Use with caution - breakthrough can occur between 11 and 239 minutes.
>240	Recommended for protection - no breakthrough up to 240 minutes.
N/A	The chemotherapy drug did not reach the minimum permeation rate (0.01 µg/cm²/min) as defined within ASTM D6978.

CAUTION: It's the user's responsibility to determine the applicability of these gloves for their intended use with chemotherapy drugs.

*Tested per ASTM D6978, Standard Practice Assessment of Resistance of Medical Gloves to Permeation by Chemotherapy Drugs. The testing conditions used are intended to approximate the worst case conditions for use. Testing was conducted on a single layer glove material.

DEFINITION OF TERMS

Breakthrough time: The time required for the test chemical to be detected on the inside of the glove. Essentially, this is the amount of time that the glove can resist a chemical when the glove is fully immersed in the chemical.

Permeation: The process where chemicals, such as liquids, gases and vapors can pass through a glove film (or other PPE interfaces) without penetrating directly through a pinhole, tear or other visible opening.

Permeation rate: The flowrate of the chemical after the chemical breaks through the inside of the glove. It is measured in amount per surface area of the glove per time (µg/cm²/min).

HG5 Nitrile Cleanroom Gloves

CHEMICAL RESISTANCE GUIDE⁵

PUREZERO* HG5 White Nitrile Gloves 12"			PUREZERO* HG5 Blue SGX* Nitrile Gloves 12"	
Chemical (Concentration %)	Minimum Breakthrough Time (minutes)	Permeation Rate (µg/cm ² /min)	Minimum Breakthrough Time (minutes)	Permeation Rate (µg/cm ² /min)
Acetic Acid (99)	15	2.9E+03	10.1	3.2E+04
Acrylamide (40)	>480***	0.03	>480***	<1.0
Ammonium Hydroxide (25)	60.8	5.5	26.4	4.2
1-Butanol (99)	55.8	1.7E+01	357.6	0.9
Chloroform (70)	0	N/A	0	N/A
Citric Acid (30)	>480	<1.0	>480	<1.0
Citric Acid (70)	>480	<1.0	>480	<1.0
Cyclohexane (99)	60.6	2.9E+01	>480***	<1.0
Dimethyl Sulfoxide (99)	10.2	N/A	0	N/A
Ethanol (70)	43.3	11.4	29.1	2.0E+01
Ethanol (99)	20.3	7.6E+01	17.5	7.0E+01
Ethidium Bromide (1)	>480	<1.0	>480	<1.0
Hydrochloric Acid (30)	341.1	17.0	>480	<1.0
Isopropyl Alcohol (70)	145.2	3.0	>480***	<1.0
Isopropyl Alcohol (99)	98.5	3.3	>480***	<1.0
Methanol (99)	9.3	N/A	1.2	4.8E+01
Nitric Acid (65)	10.0	3.2E+02	3.1	3.2E+04
Phosphoric Acid (70)	>480	<1.0	>480	<1.0
Sodium Hydroxide (50)	>480	<1.0	>480	<1.0
Sodium Hypochlorite (10-13)	>480	<1.0	>480	<1.0
Sulfuric Acid (50)	>480	<1.0	>480	<1.0

Use the rating system below to determine the chemical compatibility for exposure:

<10	Permeation breakthrough is poor - avoid use with this chemical.
11 - 479	Glove is suitable under careful control of its use.
>480	Permeation breakthrough is excellent.

The following gloves are applicable to this chart:

HALYARD* **PUREZERO*** HG5 White Nitrile Gloves

HALYARD* **PUREZERO*** HG5 Blue SGX* Nitrile Gloves

*** Though detected at trace amounts, the permeation did not hit the required rate of 1.0 µg/cm²/min to be deemed as Standardized Breakthrough per EN 16523-01:2015.

DISCLAIMER: The permeation breakthrough times presented in this chart were evaluated using the Test Method EN 16523-1.

* Permeation Time (minutes) and Permeation Rate (µg/cm²/min) using Test Method EN 16523-1

Contact your Sales Representative for additional chemical and chemotherapy drug testing information.



November 13th, 2023

RE: ESD Testing for HALYARD* PUREZERO* Nitrile Gloves

Dear Valued Customer,

This letter is in response to your recent inquiry regarding ESD testing of **HALYARD* PUREZERO* Nitrile Gloves**.

The following **HALYARD* PUREZERO* Nitrile Glove** families have been tested against ANSI/ESD STM15.1:2019 "In-Use Resistance Testing of Gloves and Finger Cots":

HALYARD* PUREZERO* HG3 Cleanroom Nitrile Gloves

<u>Glove Description</u>	<u>Code</u>
HALYARD* PUREZERO* HG3 White Nitrile Gloves	CLN3031XS
HALYARD* PUREZERO* HG3 White Nitrile Gloves	CLN3031SM
HALYARD* PUREZERO* HG3 White Nitrile Gloves	CLN3031MD
HALYARD* PUREZERO* HG3 White Nitrile Gloves	CLN3031LG
HALYARD* PUREZERO* HG3 White Nitrile Gloves	CLN3031XL
HALYARD* PUREZERO* HG3 Blue Nitrile Gloves	CLN9031XS
HALYARD* PUREZERO* HG3 Blue Nitrile Gloves	CLN9031SM
HALYARD* PUREZERO* HG3 Blue Nitrile Gloves	CLN9031MD
HALYARD* PUREZERO* HG3 Blue Nitrile Gloves	CLN9031LG
HALYARD* PUREZERO* HG3 Blue Nitrile Gloves	CLN9031XL
HALYARD* PUREZERO* HG3 White SGX* Nitrile Gloves	CLN3231XS
HALYARD* PUREZERO* HG3 White SGX* Nitrile Gloves	CLN3231SM
HALYARD* PUREZERO* HG3 White SGX* Nitrile Gloves	CLN3231MD
HALYARD* PUREZERO* HG3 White SGX* Nitrile Gloves	CLN3231LG
HALYARD* PUREZERO* HG3 White SGX* Nitrile Gloves	CLN3231XL
HALYARD* PUREZERO* HG3 White Sterile Nitrile Gloves	CLN323260
HALYARD* PUREZERO* HG3 White Sterile Nitrile Gloves	CLN323265
HALYARD* PUREZERO* HG3 White Sterile Nitrile Gloves	CLN323270
HALYARD* PUREZERO* HG3 White Sterile Nitrile Gloves	CLN323275
HALYARD* PUREZERO* HG3 White Sterile Nitrile Gloves	CLN323280
HALYARD* PUREZERO* HG3 White Sterile Nitrile Gloves	CLN323285
HALYARD* PUREZERO* HG3 White Sterile Nitrile Gloves	CLN323290
HALYARD* PUREZERO* HG3 White Sterile Nitrile Gloves	CLN323210

HALYARD* PUREZERO* HG3 Blue Sterile Nitrile Gloves	CLN923260
HALYARD* PUREZERO* HG3 Blue Sterile Nitrile Gloves	CLN923265
HALYARD* PUREZERO* HG3 Blue Sterile Nitrile Gloves	CLN923270
HALYARD* PUREZERO* HG3 Blue Sterile Nitrile Gloves	CLN923275
HALYARD* PUREZERO* HG3 Blue Sterile Nitrile Gloves	CLN923280
HALYARD* PUREZERO* HG3 Blue Sterile Nitrile Gloves	CLN923285
HALYARD* PUREZERO* HG3 Blue Sterile Nitrile Gloves	CLN923290
HALYARD* PUREZERO* HG3 Blue Sterile Nitrile Gloves	CLN923210

HALYARD* **PUREZERO* HG5 Cleanroom Nitrile Gloves**

<u>Glove Description</u>	<u>Code</u>
HALYARD* PUREZERO* HG5 White Nitrile Gloves	CLN30512XS
HALYARD* PUREZERO* HG5 White Nitrile Gloves	CLN30512SM
HALYARD* PUREZERO* HG5 White Nitrile Gloves	CLN30512MD
HALYARD* PUREZERO* HG5 White Nitrile Gloves	CLN30512LG
HALYARD* PUREZERO* HG5 White Nitrile Gloves	CLN30512XL
HALYARD* PUREZERO* HG5 Blue SGX* Nitrile Gloves	CLN92512XS
HALYARD* PUREZERO* HG5 Blue SGX* Nitrile Gloves	CLN92512SM
HALYARD* PUREZERO* HG5 Blue SGX* Nitrile Gloves	CLN92512MD
HALYARD* PUREZERO* HG5 Blue SGX* Nitrile Gloves	CLN92512LG
HALYARD* PUREZERO* HG5 Blue SGX* Nitrile Gloves	CLN92512XL

HALYARD* **PUREZERO* Nitrile Exam Gloves**

<u>Glove Description</u>	<u>Code</u>
HALYARD* PUREZERO* MARIN* Nitrile Exam Gloves	LFS111XS
HALYARD* PUREZERO* MARIN* Nitrile Exam Gloves	LFS111SM
HALYARD* PUREZERO* MARIN* Nitrile Exam Gloves	LFS111MD
HALYARD* PUREZERO* MARIN* Nitrile Exam Gloves	LFS111LG
HALYARD* PUREZERO* MARIN* Nitrile Exam Gloves	LFS111XL
HALYARD* PUREZERO* MARIN-XTRA* Nitrile Exam Gloves	LFS121XS
HALYARD* PUREZERO* MARIN-XTRA* Nitrile Exam Gloves	LFS121SM
HALYARD* PUREZERO* MARIN-XTRA* Nitrile Exam Gloves	LFS121MD
HALYARD* PUREZERO* MARIN-XTRA* Nitrile Exam Gloves	LFS121LG
HALYARD* PUREZERO* MARIN-XTRA* Nitrile Exam Gloves	LFS121XL
HALYARD* PUREZERO* LIMON* Nitrile Exam Gloves	LFS311XS
HALYARD* PUREZERO* LIMON* Nitrile Exam Gloves	LFS311SM
HALYARD* PUREZERO* LIMON* Nitrile Exam Gloves	LFS311MD

HALYARD* PUREZERO* LIMON* Nitrile Exam Gloves	LFS311LG
HALYARD* PUREZERO* LIMON* Nitrile Exam Gloves	LFS311XL
HALYARD* PUREZERO* LIMON-XTRA* Nitrile Exam Gloves	LFS321XS
HALYARD* PUREZERO* LIMON-XTRA* Nitrile Exam Gloves	LFS321SM
HALYARD* PUREZERO* LIMON-XTRA* Nitrile Exam Gloves	LFS321MD
HALYARD* PUREZERO* LIMON-XTRA* Nitrile Exam Gloves	LFS321LG
HALYARD* PUREZERO* LIMON-XTRA* Nitrile Exam Gloves	LFS321XL
HALYARD* PUREZERO* ULTRA VIOLET* Nitrile Exam Gloves	LFS511XS
HALYARD* PUREZERO* ULTRA VIOLET* Nitrile Exam Gloves	LFS511SM
HALYARD* PUREZERO* ULTRA VIOLET* Nitrile Exam Gloves	LFS511MD
HALYARD* PUREZERO* ULTRA VIOLET* Nitrile Exam Gloves	LFS511LG
HALYARD* PUREZERO* ULTRA VIOLET* Nitrile Exam Gloves	LFS511XL

HALYARD* **PUREZERO* Nitrile Gloves**

<u>Glove Description</u>	<u>Code</u>
HALYARD* PUREZERO* MARIN* Nitrile Gloves	LFS1117XS
HALYARD* PUREZERO* MARIN* Nitrile Gloves	LFS1117SM
HALYARD* PUREZERO* MARIN* Nitrile Gloves	LFS1117MD
HALYARD* PUREZERO* MARIN* Nitrile Gloves	LFS1117LG
HALYARD* PUREZERO* MARIN* Nitrile Gloves	LFS1117XL
HALYARD* PUREZERO* LIMON* Nitrile Gloves	LFS3117XS
HALYARD* PUREZERO* LIMON* Nitrile Gloves	LFS3117SM
HALYARD* PUREZERO* LIMON* Nitrile Gloves	LFS3117MD
HALYARD* PUREZERO* LIMON* Nitrile Gloves	LFS3117LG
HALYARD* PUREZERO* LIMON* Nitrile Gloves	LFS3117XL
HALYARD* PUREZERO* ULTRA VIOLET* Nitrile Gloves	LFS5117XS
HALYARD* PUREZERO* ULTRA VIOLET* Nitrile Gloves	LFS5117SM
HALYARD* PUREZERO* ULTRA VIOLET* Nitrile Gloves	LFS5117MD
HALYARD* PUREZERO* ULTRA VIOLET* Nitrile Gloves	LFS5117LG
HALYARD* PUREZERO* ULTRA VIOLET* Nitrile Gloves	LFS5117XL

Based on the ANSI/ESD STM15.1:2019 test results from an external laboratory at conditions of 12% RH and 23°C, all **HALYARD* **PUREZERO*** Nitrile Glove** product families listed above are within the dissipative classification range (Resistance = 10^4 to 10^{11} ohms) as defined by ANSI/ESD standards.

Therefore, **HALYARD* **PUREZERO*** Nitrile Gloves** are considered to be static dissipative in-use. Please note that this is based on a standardized test method in a laboratory environment, and the resistance test results and classification do not fully characterize the glove for all electrostatic properties. Other electrostatic properties, such as charge accumulation, and specific process conditions may need to be assessed based on your particular application prior to use.



Thank you for your interest in Halyard products. If you have any questions or need additional information, please do not hesitate to contact us at PIQ@hyh.com or call us directly at (844) 425-9273.

Sincerely,

A handwritten signature in black ink, reading 'Caitlin Senter'.

Caitlin Senter
Director
Global Regulatory Affairs
O&M Halyard, Inc.

A handwritten signature in black ink, reading 'Ryan Solan'.

Ryan Solan
Manager
Global Research and Development
O&M Halyard, Inc.

*Registered Trademark or Trademark of O&M Halyard or its affiliates. ©2023. All rights reserved.

COPY-04825



RE: Compliance statement – HALYARD* **PUREZERO*** Nitrile Gloves

Please be advised that to the best of O&M Halyard knowledge, the **PUREZERO*** HG3 Nitrile Gloves and HALYARD* **PUREZERO*** HG5 Nitrile Gloves are produced entirely from materials of synthetic origin and therefore are free from human or any other animal derived materials including bovine products (Bovine Spongiform Encephalopathy (BSE) and Transmissible Spongiform Encephalopathy (TSE)).

- *Under various environmental protection and product safety regulations, directives, standards, and initiatives “intentionally introduced” means “deliberately utilized during the manufacture of the components and/or for the formulation of a material or component where its continued presence is desired in the final product to provide a specific property, appearance or quality.”*

This information is based on O&M Halyard, Inc.'s knowledge of these products at the time of publication.

If you have any questions or need additional information, please do not hesitate to contact us at PIQ@hyh.com or call us directly at (844) 425-9273.

–This statement is valid unsigned –

*Registered Trademark or Trademark of O&M Halyard or its affiliates. ©2020, 2022. All rights reserved.



March 14th, 2023

RE: **HALYARD* PUREZERO* Nitrile Gloves**

Dear Valued Customer,

This letter is in response to your recent inquiry regarding storage conditions of **HALYARD* PUREZERO* Nitrile Gloves**.

As displayed by the indications on the packaging labeling, **HALYARD* PUREZERO* Nitrile Gloves** shall be stored in conditions where the product is kept dry (away from moisture), away from direct sunlight, away from sources of heat, and away from radioactive sources. To reduce the potential of accelerated aging, it is recommended to store the product at standard room temperature conditions, when possible.

Thank you for your interest in HALYARD* products. If you have any questions or need additional information, please do not hesitate to contact us at PIQ@hyh.com or call us directly at (844) 425-9273.

Sincerely,

Ryan Solan
R&D Senior Engineer
Global Research and Development
O&M Halyard, Inc.

Theresa McCoy
Global Product Manager
Global Strategic Marketing
O&M Halyard, Inc.

*Registered Trademark or Trademark of O&M Halyard or its affiliates.

COPY-04606

September 24, 2023

RE: HALYARD* PUREZERO* HG3 and HG5 Nitrile Gloves

Dear Valued Customer,

This letter is in response to your recent inquiry regarding the presence of silicone for the **PUREZERO* HG3 White Nitrile Gloves**, **PUREZERO* HG3 White SGX* Nitrile Gloves**, **PUREZERO* HG3 Light Blue Nitrile Gloves**, **PUREZERO* HG3 Sterile Light Blue Nitrile Gloves**, **PUREZERO* HG3 Sterile White Nitrile Gloves**, **HALYARD* PUREZERO* HG5 White Nitrile Gloves**, and **HALYARD* PUREZERO* HG5 Blue SGX* Nitrile Gloves**.

According to ASTM E1252 Standard Practice for General Techniques for Obtaining Spectra for Qualitative Analysis, the results below reflect the detectable limits of silicone covering the spectral range from 4000cm⁻¹ to 50cm⁻¹ via FT-IR (Fourier Transform Infrared Analysis). The results below indicate that the **HALYARD* PUREZERO* HG3 NITRILE GLOVES** and **HALYARD* PUREZERO* HG5 NITRILE GLOVES** have no silicone detectable on the outside surface and inside surface of either gloves sampled per 3rd party testing.

The following product codes are applicable: **PUREZERO* HG3 White Nitrile Gloves**: CLN92512XS, CLN92512SM, CLN92512MD, CLN92512LG, CLN92512XL; **PUREZERO* HG3 Light Blue Nitrile Gloves**: CLN90511XS, CLN90511SM, CLN90511MD, CLN90511LG, CLN90511XL; **PUREZERO* HG3 White SGX* Nitrile Gloves**: CLN3031XS, CLN3031SM, CLN3031MD, CLN3031LG, CLN3031XL; **PUREZERO* HG3 Sterile White Nitrile Gloves**: CLN323260, CLN323265, CLN323270, CLN323275, CLN323280, CLN323290, CLN323210; **PUREZERO* HG3 Sterile Light Blue Nitrile Gloves**: CLN923260, CLN923265, CLN923270, CLN923275, CLN923280, CLN923285, CLN923290, CLN923210; **HALYARD* PUREZERO* HG5 White Nitrile Gloves**: CLN30512XS, CLN30512SM, CLN30512MD, CLN30512LG, and CLN30512XL; **HALYARD* PUREZERO* HG5 Blue SGX* Nitrile Gloves**: CLN92512XS, CLN92512SM, CLN92512MD, CLN92512LG, and CLN92512XL.

Fourier Transform Infrared Analysis (FT-IR) Per ASTM E1252-98(21)	
Gloves	Results
PUREZERO* HG3 and HG5 Nitrile Gloves	No silicon detected

Thank you for your interest in Halyard products. If you have any questions or need additional information, please do not hesitate to contact us at PIQ@hyh.com or call us directly at (844) 425-9273.

Sincerely

*Registered Trademark or Trademark of O&M Halyard or its affiliates. ©2023. All rights reserved.

COPY-04662



A handwritten signature in black ink, appearing to read 'Caitlin Senter'.

Caitlin Senter
Director
Global Regulatory Affairs
O&M Halyard, Inc.

A handwritten signature in black ink, appearing to read 'Nimia Maya'.

Nimia Maya
R&D Engineer II
Global Research and Development
O&M Halyard, Inc.

TITLE: HALYARD* PUREZERO* HG3 & HG5 Nitrile Gloves Packaging

UPDATE: Alternate packaging supplier for HALYARD* PUREZERO* HG3 and HG5 Nitrile Gloves

WHAT YOU NEED TO KNOW:

There will be an alternate supplier for the packaging (poly bag, poly pouch and poly wallet) used for **HALYARD* PUREZERO* HG3 and HG5 Nitrile Gloves**

WHAT YOU CAN EXPECT:

There is an alternate supplier being qualified to supply the poly bag, poly pouch and poly wallet used to package **HALYARD* PUREZERO* HG3 and HG5 Nitrile Gloves**. The alternate supplier, TAKO Astatic Technology SDN BHD, will supply the same packaging as our current supplier, Tip Corporation SDN BHD. All specifications for the packaging, including the material, composition, dimensions, thickness, and ink, will be identical to the current packaging. There will be no change to the appearance of the packaging or printing. There will be no change to the sterilization process or the sterility assurance level of the products. Additionally, there will be no changes to the product codes or product labeling.

TIMING OF CHANGE: There will be a rolling change for the alternate supplier's packaging that will enter our inventory as early as December 2023. Both packaging vendors could be used based on supply chain availability.



PRODUCTS IMPACTED BY THIS CHANGE:

PUREZERO* HG3 White Nitrile Gloves
CODE
CLN3031XS
CLN3031SM
CLN3031MD
CLN3031LG
CLN3031XL
PUREZERO* HG3 Light Blue Nitrile Gloves
CODE
CLN9031XS
CLN9031SM
CLN9031MD
CLN9031LG
CLN9031MD
PUREZERO* HG3 White SGX* Nitrile Gloves
CODE
CLN3231XS
CLN3231SM
CLN3231MD
CLN3231LG
CLN3231XL
PUREZERO* HG3 White Sterile Nitrile Gloves
CODE
CLN323260
CLN323265
CLN323270
CLN323275
CLN323280
CLN323285
CLN323290
CLN323210
PUREZERO* HG3 Light Blue Sterile Nitrile Gloves
CODE
CLN923260
CLN923265
CLN923270
CLN923275
CLN923280
CLN923285
CLN923290
CLN923210



PUREZERO* HG5 White Nitrile Gloves
CODE
CLN30512XS
CLN30512SM
CLN30512MD
CLN30512LG
CLN30512XL
PUREZERO* HG5 Blue SGX* Nitrile Gloves
CODE
CLN92512XS
CLN92512SM
CLN92512MD
CLN92512LG
CLN92512XL

Thank you for your interest in HALYARD* products. If you have any questions or need additional information including example certifications, please do not hesitate to contact us at PIQ@hyh.com, call us directly at 1-844-425-9273 or reach out to your O&M Halyard commercial representative or distributor.

Sincerely,

Gustavo Fiallos
Director Global Quality Operations, Owens & Minor

*Registered Trademark or Trademark of O&M Halyard. © 2023. All rights reserved. COPY-04748

1 Edison Drive, Alpharetta, GA 30005 | 844.425.9273
owens-minor.com | halyardhealth.com | byramhealthcare.com